 



















 



 












 
 



 

 

 

 














 
 







Original		Rechange		Original		Rechange	
	Input		AV / Input / RDS		AD		Shift + AV / Input / RDS
	Power		Power		0		0
	→[/]←		Shift + OK		Recall		Back / Return
	[< >]		Picture / Format		Vol+		Vol+
	O)I/II		Shift + Audio / Lang I/II		[i+]		Info / Angle
	TV		TV/Radio /		P+		CH+ / Page+
	List		Smart / List		Vol-		Vol-
	More Info		Shift + Info / Angle		Mute		Mute / Dimmer
	1		1		P-		CH- / Page-
	2		2		Quick		Shift + Exit / Cancel / Clear
	3		3		Guide		Guide / EPG / -/-
	4		4		↑		Shift + Up
	5		5		Exit		Exit / Cancel / Clear
	6		6		←		Shift + Left
	7		7		Up		Up
	8		8		→		Shift + Right
	9		9		Left		Left





Original	Recharge
	OK
	Right
	Down
	Menu / Home
	+ Shift + Down
	+ Shift + Back / Return
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Text / Goto
	Display / Media
	Subtitle / EQ
	<< / Tune-
	Play / Slow
	>> / Tune+
	I<< / Preset-

Original	Recharge
	Stop / Hold
	Pause / Step / Freeze
	>>I / Preset+
	+ Shift + Power
	Audio / Lang I/II
	Setup / OPT /
	Eject / Surround
	Sleep / Timer
	+ Shift + D.Menu / Top Menu
	D.Menu / Top
	+ Shift + 2

