


Original	Recharge	Original	Recharge
VHS/DVD Power	Power	Create Chapter	TV/R
Direct TV Rec	Subt	I<< Skip	I<<
VHS/DVD	Smart	Skip >>I	>>I
1	1	REW / << Slow/Search	<<
2	2	FF / Slow/Search	>>
3	3	Stop	Stop
4	4	Pause	Pause
5	5	Play	Play
6	6	Direct Navigator / Top Menu	D. Menu
7	7	Functions	List
8	8	Up	Up
9	9	Left	Left
0	0	Enter	Ok
Cancel / Reset	Exit	Right	Right
Input Select	Guide	Down	Down
CH+ / Tracking/V-Lock+	Ch +	Sub Menu	Menu
CH- / Tracking/V-Lock-	Ch -	Return	Back


Original	Recharge	Original	Recharge
VHS/DVD Power	Power	Create Chapter	TV/R
Direct TV Rec	Subt	I<< Skip	I<<
VHS/DVD	Smart	Skip >>I	>>I
1	1	REW / << Slow/Search	<<
2	2	FF / Slow/Search	>>
3	3	Stop	Stop
4	4	Pause	Pause
5	5	Play	Play
6	6	Direct Navigator / Top Menu	D. Menu
7	7	Functions	List
8	8	Up	Up
9	9	Left	Left
0	0	Enter	Ok
Cancel / Reset	Exit	Right	Right
Input Select	Guide	Down	Down
CH+ / Tracking/V-Lock+	Ch +	Sub Menu	Menu
CH- / Tracking/V-Lock-	Ch -	Return	Back

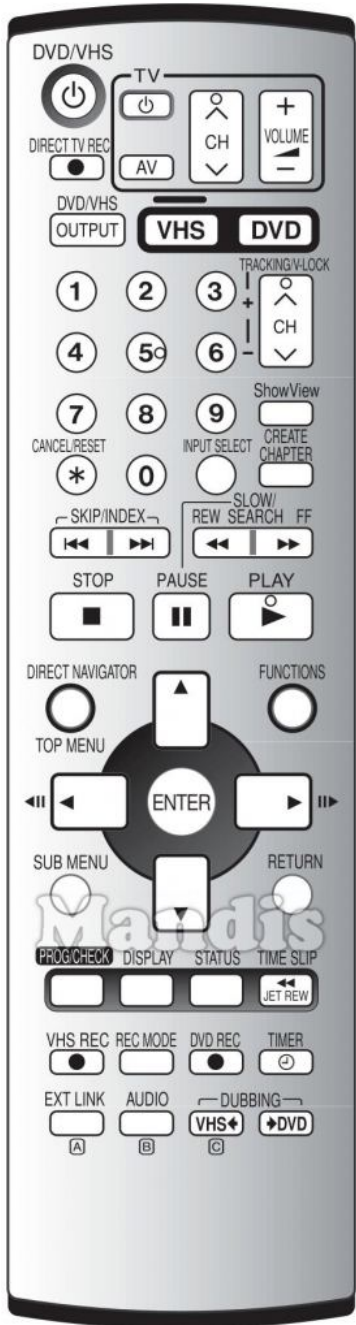




Original	Recharge	Original	Recharge
 Prog / Check	 Sleep		
 Display	 Info		
 Status	 Media		
 Time Slip	 Vol +		
 Timer	 AV		
 Ext Link	 3D		
 Audio / B	 Dual		
 Dubbing	 Blue		



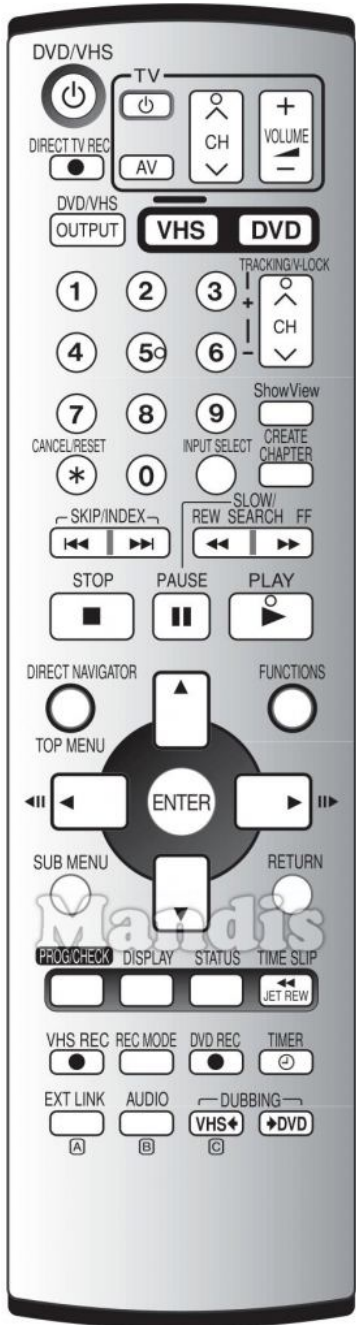

 



 

 


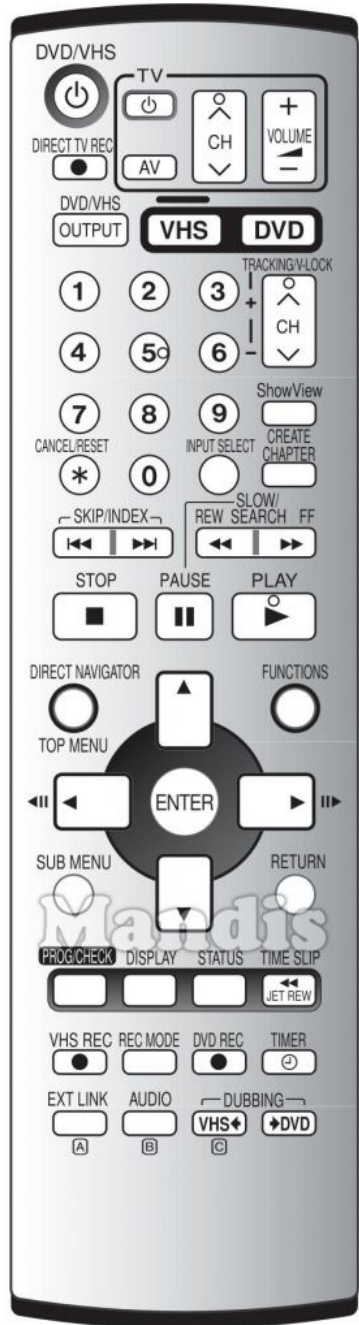


 














 





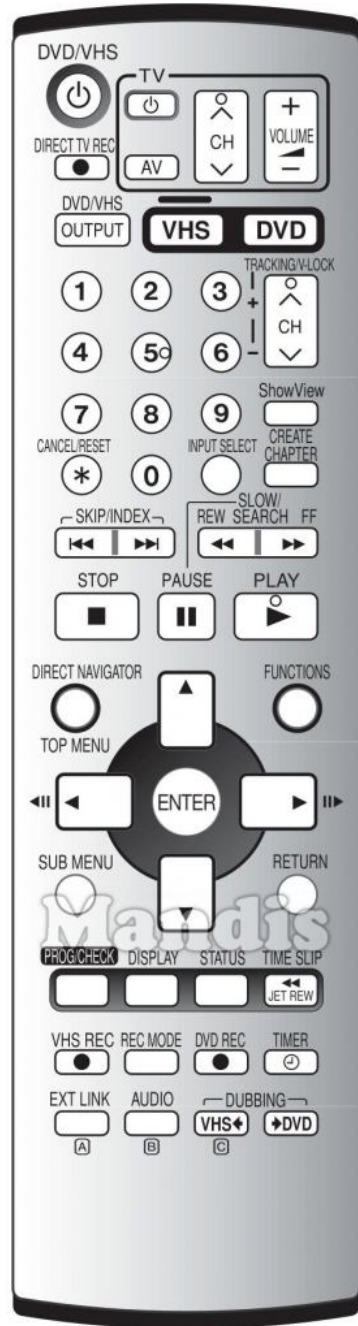
	Original	Recharge	Original	Recharge
	Power			
	AV			
	Volume+			
	Volume-			
	CH+			
	CH-			





	Original	Recharge	Original	Recharge
	VHS/DVD Power		Power	
	Direct TV Rec		Subt	
	VHS/DVD		Smart	
	1		1	
	2		2	
	3		3	
	4		4	
	5		5	
	6		6	
	7		7	
	8		8	
	9		9	
	0		0	
	Cancel / Reset		Exit	
	Input Select		AV	
	CH+ / Tracking/V-Lock+		Ch +	
	CH- / Tracking/V-Lock-		Ch -	
	ShowView		Media	
	I<< Index		I<<	
	Index >>I		>>I	
	REW		<<	
	FF		>>	
	Stop		Stop	
	Pause		Pause	
	Play		Play	
	Up		Up	
	Left		Left	
	Enter		Ok	
	Right		Right	
	Down		Down	
	Return		Back	
	Prog/Check		Sleep	
	Display		Info	
	Jet Rew		Shift + <<	





Original	Recharge
Rec	Rec
Rec Mode	Shift + Rec
Timer	Shift + AV
A / Ext Link	Red
Audio / B	Dual
Dubbing	D. Menu

Original	Recharge

