 

 

 

 

 





 





 

















Original	Rechange
	 Power
	 Mute / Dimmer
	 Play / Slow
	 Stop / Hold
	 I<< / Preset-
	 >>I / Preset+
	 EQ.Effect
	 S.W.Effect
	 P.Open/Close
	 P.Mode
	 Sleep
	 Tuner Band
	 Presence
	 AI/Loudness
	 AI/Auto/Focus/GE
	 LD/AUX
	 Up

Original	Rechange
	 Left
	 Check
	 Right
	 Clear
	 Down
	 Volume Control +
	 M.Call
	 P.Call Up
	 Volume Control -
	 Display
	 P.Call Down
	 1
	 2
	 3
	 4
	 5
	 6



[illegible]

Tune-