



Original	Rechange
Power	Power
Mute	Mute / Dimmer
Off Timer	Sleep / Timer
Guide	Guide / EPG / -/--
Up	Up
Tv/AV	AV / Input / RDS
Left	Left
OK	OK
Right	Right
Menu	Menu / Home
Down	Down
Exit	Exit / Cancel / Clear
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
[=]/Text	Text / Goto

Original	Rechange
[=◇]/F.P.	Smart / List
[=i]/Index	Display / Media
[=+]/Hold	Shift + Stop /
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
C	Back / Return
0/VCR	0
0/VCR	Shift + 4
i	Info / Angle
CH+	CH+ / Page+





Original	Rechange	Original	Rechange
	Vol+		
	CH-		
	Vol-		
	[+]/Aspect		
	N		
	Power VCR		
	Rec VCR		
	Programme Down		
	Programme Up		
	<< VCR		
	>> VCR		
	Stop VCR		
	Pause/Step VCR		
	Play VCR		





Original	Recharge
Power DVD	Power
Rec DVD	Rec / Rec Mode
Programme Down	CH- / Page-
Programme Up	CH+ / Page+
I<< DVD	I<< / Preset-
>>I DVD	>>I / Preset+
Stop DVD	Stop / Hold
Pause/Step DVD	Pause / Step / Freeze
Play DVD	Play / Slow

Original	Recharge

