



Original	Rechange
Power	Power
Mute	Mute / Dimmer
Off Timer	Sleep / Timer
Guide	Guide / EPG / -/--
Up	Up
Tv/AV	AV / Input / RDS
Left	Left
OK	OK
Right	Right
Menu	Menu / Home
Down	Down
Exit	Exit / Cancel / Clear
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
[=]/Text	Text / Goto

Original	Rechange
[=◇]/F.P.	Smart / List
[=i]/Index	Display / Media
[=+]/Hold	Shift + Stop /
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
C	Back / Return
0/VCR	0
0/VCR	Shift + 4
i	Info / Angle
CH+	CH+ / Page+





Original	Recharge
 Vol+	 Vol+
 CH-	 CH- / Page-
 Vol-	 Vol-
 [+]/Aspect	 Picture / Format
 N	 D.Menu / Top
 Power VCR	 Shift + Power
 Rec VCR	 Rec / Rec Mode
 Programme Down	 Shift + CH- /
 Programme Up	 Shift + CH+ /
 << VCR	 << / Tune-
 >> VCR	 >> / Tune+
 Stop VCR	 Stop / Hold
 Pause/Step VCR	 Pause / Step / Freeze
 Play VCR	 Play / Slow

Original	Recharge





Original	Recharge
 Power DVD	 Power
 Rec DVD	 Rec / Rec Mode
 Programme Down	 CH- / Page-
 Programme Up	 CH+ / Page+
 I<< DVD	 I<< / Preset-
 >>I DVD	 >>I / Preset+
 Stop DVD	 Stop / Hold
 Pause/Step DVD	 Pause / Step / Freeze
 Play DVD	 Play / Slow

Original	Recharge

