



Original		Rechange		Original		Rechange	
	Standby		Power		Audio		Audio / Lang I/II
	DTV/VCR		AV / Input / RDS		0		0
	EPG		Guide / EPG / /--		Game		Display / Media
	Favorite		Fav / Marker / PC		Text		Text / Goto
	Info		Info / Angle		TV/Radio		TV/Radio /
	Mute		Mute / Dimmer		Play		Play / Slow
	1		1		Pause		Pause / Step / Freeze
	2		2		Stop		Stop / Hold
	3		3		Zoom		Zoom / Size
	USB		Shift + 8		Prev		I<< / Preset-
	4		4		Next		>>I / Preset+
	5		5		Rev		<< / Tune-
	6		6		Fwd		>> / Tune+
	Sub-T		Subtitle / EQ		Menu		Menu / Home
	7		7		Up / CH+		Up
	8		8		Up / CH+		CH+ / Page+
	9		9		Exit/Recall		Exit / Cancel / Clear





Original	Rechange	Original	Rechange
 Exit/Recall	 Back / Return		
 Left / Vol-	 Left		
 Left / Vol-	 Vol-		
 OK	 OK		
 Right / Vol+	 Vol+		
 Right / Vol+	 Right		
 Down / CH-	 CH- / Page-		
 Down / CH-	 Down		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		

