
 




 









 






 






 
 











Original	Recharge
 Power	 Power
 Tv Standby	 Shift + Power
 Input Tv	 Shift + AV
 Mute Tv	 Shift + Mute
 Vol+ Tv	 Shift + Right
 Vol- Tv	 Shift + Left
 CH+ Tv	 Shift + Ch +
 CH- Tv	 Shift + Ch -
 TV	 TV/R
 Aspect/Ratio	 Format
 HD	 Smart
 Mosaic	 Media
 Mute	 Mute
 Messages	 Options
 Help	 AV
 Cancel	 Shift + Back
 Guide	 Guide

Original	Recharge
 Info	 Info
 Vol+	 Vol +
 Vol-	 Vol -
 CH+	 Ch +
 CH-	 Ch -
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 OK	 Ok
 FAV	 Pre Ch
 Planner	 Text
 Back	 Back
 Rec	 Rec
 Pause	 Pause
 Stop	 Stop
 <<	 <<





Original	Recharge	Original	Recharge
 Play	 Play	 #	 Subt
 >>	 >>		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 *	 Dual		

