



Original	Rechange
Power Receiver	Power
BD/DVD	Shift + 2
CBL/SAT	Shift + 0
Game	Shift + 9
PC	Shift + Fav / Marker / PC
AUX	Shift + 7
TUNER	Shift + 6
TV/CD	Shift + 3
Phono	Shift + 4
NET	Shift + Guide / EPG / -/-
USB	Shift + 8
Display	Display / Media
Muting	Mute / Dimmer
CH/Disc/Album	CH+ / Page+
Vol+	Vol+
CH/Disc/Album-	CH- / Page-
Vol-	Vol-

Original	Rechange
Up	Up
Left Playlist	Left
Enter	OK
Right Playlist	Right
Q/Setup	Setup / OPT /
Down	Down
Return	Back / Return
Home/Audio	Audio / Lang I/II
I<<	I<< / Preset-
<<	<< / Tune-
>>	>> / Tune+
>>I	>>I / Preset+
Pause	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
Movie/Tv/Search/	Red / Netflix / Search
Music/Repeat/B	Green / APP / Repeat





 









 









 



 


















 










 













Original	Rechange	Original	Rechange
Game/Random/	Yellow / YouTube / Repeat		
Stereo/Mode/D	Blue / Prime Video / Random		
1	1		
2	2		
3	3		
4	4		
5	5		
6	6		
7	7		
8	8		
9	9		
+10/--/--10/Dimmer/D.Tun	Guide / EPG / --		
0/11	0		
CLR/Sleep/12	Fav / Marker / PC		
CLR/Sleep/12	Sleep / Timer		
CLR/Sleep/12	Exit / Cancel / Clear		

Original	Rechange












 

 

 











 

 




 

 


Original		Rechange		Original		Rechange	
	Power BD/DVD		Power		Down BD/DVD		Down
	Play BD/DVD		Play / Slow		Return BD/DVD		Back / Return
	Pause BD/DVD		Pause / Step / Freeze		Vol+ Receiver		Vol+
	Stop BD/DVD		Stop / Hold		BD/DVD		Smart / List
	<< BD/DVD		<< / Tune-		Vol- Receiver		Vol-
	>> BD/DVD		>> / Tune+		CBL/SAT		Display / Media
	I<< BD/DVD		I<< / Preset-		1 BD/DVD		1
	>>I BD/DVD		>>I / Preset+		2 BD/DVD		2
	Audio BD/DVD		Audio / Lang I/II		3 BD/DVD		3
	Top Menu		D.Menu / Top		4 BD/DVD		4
	Setup BD/DVD		Setup / OPT /		5 BD/DVD		5
	Menu BD/DVD		Menu / Home		6 BD/DVD		6
	Up BD/DVD		Up		7 BD/DVD		7
	Left BD/DVD		Left		8 BD/DVD		8
	Enter BD/DVD		OK		9 BD/DVD		9
	Right BD/DVD		Right		+10/--/--10		Guide / EPG / -/--
	CLR/12 BD/DVD		Exit / Cancel / Clear		0/11 BD/DVD		0



 


 




Original	Recharge
 CLR/12 BD/DVD	 Fav / Marker / PC
 Search BD/DVD	 Red / Netflix / Search
 Repeat BD/DVD	 Green / APP / Repeat
 Stereo/Mode	 Yellow / YouTube / Repeat
 Random	 Blue / Prime Video / Random
 Power CBL/SAT	 Shift + Power
 Play CBL/SAT	 Shift + Play /
 Pause CBL/SAT	 Shift + Pause / Step /
 Stop CBL/SAT	 Shift + Stop /
 << CBL/SAT	 Shift + << /
 >> CBL/SAT	 Shift + >> /
 Setup CBL/SAT	 Shift + Setup / OPT / Tools
 Menu/Prev CH CBL/SAT	 Shift + Menu /
 Up CBL/SAT	 Shift + Up
 Left CBL/SAT	 Shift + Left
 Enter CBL/SAT	 Shift + OK
 Right CBL/SAT	 Shift + Right

Original	Recharge
 Down CBL/SAT	 Shift + Down
 Return CBL/SAT	 Shift + Back / Return
 CH Disc/Album+ CBL/SAT	 Shift + CH+ /
 CH Disc/Album- CBL/SAT	 Shift + CH- /
 1 CBL/SAT	 Shift + 1
 2 CBL/SAT	 Shift + 2
 3 CBL/SAT	 Shift + 3
 4 CBL/SAT	 Shift + 4
 5 CBL/SAT	 Shift + 5
 6 CBL/SAT	 Shift + 6
 7 CBL/SAT	 Shift + 7
 8 CBL/SAT	 Shift + 8
 9 CBL/SAT	 Shift + 9
 Guide CBL/SAT	 Shift + Guide / EPG / -/-
 0/11 CBL/SAT	 Shift + 0
 Movie Tv/Search CBL/SAT	 Shift + Red / Netflix /
 Music/Repeat CBL/SAT	 Shift + Green / APP / Repeat





	Original	Rechange	
	Game/Random	 + 	Shift + Yellow / YouTube /
	Stereo/Mode	 + 	Shift + Blue / Prime

	Original	Rechange





 




Original	Recharge
Power CD	Power
Play CD	Play / Slow
Pause CD	Pause / Step / Freeze
Stop CD	Stop / Hold
<< CD	<< / Tune-
>> CD	>> / Tune+
I<< CD	I<< / Preset-
>>I CD	>>I / Preset+
Audio CD	Audio / Lang I/II
Setup CD	Setup / OPT /
Up CD	Up
Left CD	Left
Enter CD	OK
Right CD	Right
Down CD	Down
Return CD	Back / Return
Vol+ Receiver	Vol+

Original	Recharge
TV/CD	Smart / List
CH/Disc+ CD	CH+ / Page+
Vol- Receiver	Vol-
CH/Disc- CD	CH- / Page-
1 CD	1
2 CD	2
3 CD	3
4 CD	4
5 CD	5
6 CD	6
7 CD	7
8 CD	8
9 CD	9
+10/--/--10/D.Tun/Dimmer CD	Guide / EPG / -/-
0/11 CD	0
CLR/Sleep/12	Fav / Marker / PC
Search CD	Red / Netflix / Search





 



Original	Recharge
 Repeat CD	 Green / APP / Repeat
 Mode CD	 Yellow / YouTube / Repeat
 Random CD	 Blue / Prime Video / Random

Original	Recharge





	Original	Rechange	Original	Rechange
	Power Receiver Zone 2	 Power		>> Zone 2
	CH Disc/Album+ Zone 2	 CH+ / Page+		Pause Zone 2
	Vol+ Zone 2	 Vol+		Stop Zone 2
	CH Disc/Album- Zone 2	 CH- / Page-		Movie Tv Zone
	Vol- Zone 2	 Vol-		Music Zone 2
	Up Zone 2	 Up		Game Zone 2
	Left Zone 2	 Left		Stereo Zone 2
	Enter Zone 2	 OK		1 Zone 2
	Right Zone 2	 Right		2 Zone 2
	Setup Zone 2	 Setup / OPT /		3 Zone 2
	Down Zone 2	 Down		4 Zone 2
	Return Zone 2	 Back / Return		5 Zone 2
	Audio Zone 2	 Audio / Lang I/II		6 Zone 2
	I<< Zone 2	 I<< / Preset-		7 Zone 2
	>>I Zone 2	 >>I / Preset+		8 Zone 2
	<< Zone 2	 << / Tune-		9 Zone 2
	Play Zone 2	 Play / Slow		+10/--/--10/D.Tun/ Dimmer Zone 2
				Guide / EPG / -/-





Original		Recharge		Original		Recharge	
	0/11 Zone 2		0				
	CLR/Sleep/12		Fav / Marker / PC				

