



 













Original	Recharge
 Power On	 Power
 Power Off	 Shift + Power
 Mute	 Mute
 AVR	 Shift + 1
 DVD	 Shift + 2
 CD	 Shift + 3
 Tape	 Shift + 4
 VID 1 / VCR	 Shift + 5
 VID 2 / CBL/SAT	 Shift + 6
 VID 3 / TV	 Shift + 7
 DIM	 Shift + 8
 AM/FM	 Shift + 9
 6/8 CH.	 Shift + 0
 Sleep / CH +	 Shift + Ch +
 Sleep / CH +	 Sleep
 SURRE. / CH -	 Shift + Ch -
 Test	 Text

Original	Recharge
 Night	 Shift + Sleep
 Vol +	 Vol +
 Vol -	 Vol -
 CH / Guide	 Guide
 SPKR / Menu	 Menu
 Delay / Prev. CH	 Pre Ch
 Digital / Exit	 Exit
 Up	 Up
 Left	 Left
 Set	 Ok
 Right	 Right
 Down	 Down
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5





Original		Rechange	
	6		6
	7		7
	8		8
	9		9
	0		0
	Tun-M		Smart
	MEM		Media
	Tuning +		Shift + Up
	Tuning -		Shift + Down
	Preset +		Ch +
	Preset -		Ch -
	Direct		Info
	Clear		Shift + Exit
	OSD		D. Menu
	Dolby		Red
	DTS SURR		Green
	DTS NEO:6		Yellow

Original		Rechange	
	Logic 7		Blue
	Stereo		Shift + Red
	<<		<<
	Play / Play		Play
	>>		>>
	Stop		Stop
	Rec		Rec

