
 


 



 



 


 




 



 







 

 


 


 

 


 
 
 

 






 
 






 


 

 
 







 


Original	Recharge	Original	Recharge
PWR On/Off	 Power	CH/Page-	 Ch -
Mute	 Mute	1. ?	 1
Sleep Timer	 Sleep	2abc	 2
TV	 TV/R	3def	 3
Video	 D. Menu	4ghi	 4
Text	 Text	5jkl	 5
TV/SAT	 AV	6mno	 6
Menu	 Menu	7pqrm	 7
Menu Up	 Up	8tuv	 8
Display	 Info	9wxyz	 9
Menu Left	 Left	0/10	 0
OK Enter	 Ok	Radio	 Shift + TV/R
Menu Right	 Right	Clear	 Exit
Menu Down	 Down		
Volume+	 Vol +		
CH/Page+	 Ch +		
Volume-	 Vol -		








 





 

 


 
 

 





 



 



Original	Recharge	Original	Recharge
On/Off	 Power	OK Enter	 Ok
Audio Off	 Mute	Menu Right	 Right
Slow Down	 Ch -	Return	 Back
Slow Up	 Ch +	Menu Down	 Down
Pause	 Pause	Progr.	 +  Shift + Sleep
Stop	 Stop	Volume+	 Vol +
Subt.	 Subt	Next	 >>
Auto/Track	 Sleep	Volume-	 Vol -
Rep/A-B	 +  Shift + Text	Top Menu	 D. Menu
Title	 List	Prev.	 <<
Repeat/1/All	 Text	1	 1
Zoom	 +  Shift + Eject	2	 2
DVD/TV	 AV	Search	 TV/R
Menu	 Menu	Clear/00:00	 Exit
Menu Up	 Up	Open/Close	 Eject
Display	 Info	3	 3
Menu Left	 Left	4	 4






 


 




 




Original	Recharge	Original	Recharge
Setup	 Options		
5	 5		
6	 6		
7	 7		
8	 8		
9	 9		
F.Forward	 >>		
Rewind	 <<		
Record	 Rec		
Audio	 Dual		
+10	 Guide		
Random	 3D		
Angle	 Format		
0	 0		
C/CH	 Pre Ch		



 

 
 
 









Original	Recharge	Original	Recharge
PWR On/Off	 Power	2abc	 2
Mute	 Mute	3def	 3
TV	 TV/R	4ghi	 4
Video	 D. Menu	5jkl	 5
Menu	 Menu	6mno	 6
Menu Up	 Up	7pqrm	 7
Menu Left	 Left	8tuv	 8
OK Enter	 Ok	9wxyz	 9
Menu Right	 Right	Guide Pilote	 Guide
Exit	 Exit	0/10	 0
Menu Down	 Down	FAV Pref.	 Pre Ch
Volume+	 Vol +	Red	 Red
CH/Page+	 Ch +	Green	 Green
Volume-	 Vol -	Yellow	 Yellow
Audio	 Dual	Blue	 Blue
CH/Page-	 Ch -	Store	 List
1. ?	 1		



Original	Recharge	Original	Recharge
On/Off	 Power	Progr.	 +  Shift + Sleep
Audio Off	 Mute	Next	 >>
Slow Down	 Ch -	Menu Right	 Right
Pause	 Pause	Prev.	 <<
Stop	 Stop	Return	 Back
Slow Up	 Ch +	Menu Down	 Down
Title	 List	Volume+	 Vol +
Subt.	 Subt	Volume-	 Vol -
Auto/Track	 Sleep	1	 1
Rep/A-B	 +  Shift + Text	2	 2
Repeat/1/All	 Text	3	 3
Zoom	 +  Shift + Eject	Top Menu	 D. Menu
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Info	6	 6
Menu Left	 Left	7	 7
OK Enter	 Ok	Open/Close	 Eject



Original	Recharge	Original	Recharge
Setup	 Options	C/CH	 Pre Ch
Search	 TV/R		
Audio	 Dual		
Mark	 Smart		
Record	 Rec		
NTSC/PAL	 Format		
F.Forward	 >>		
Play	 Play		
3D	 3D		
Clear/00:00	 Exit		
Rewind	 <<		
8	 8		
Angle	 AV		
9	 9		
Random	 Media		
+10	 Guide		
0	 0		

