


 
 


 


 






 


 

 











 


 


 


 


 









	Original	Rechange		Original	Rechange
	Power		Power		CD >>I
	Sleep		Sleep		CD Program
	Tuner / Band		Red		CD Play
	FM Mode		Green		CD Pause
	1		1		CD Stop
	2		2		CD Cancel
	3		3		Dual
	4		4		TAPE Deck 1/2
	5		5		TAPE <<
	6		6		TAPE >>
	7		7		TAPE Rec Pause
	8		8		TAPE Rev. Play
	9		9		TAPE Stop
	0		0		TAPE Play
	>10		Guide		EQ On/Flat
	CD		Yellow		EQ Space Mode
	CD I<<		I<<		Muting -20dB
					Volume-



