
 
 
 
 









Original	Rechange
 Standby	 Power
 Info	 Info
 Mute	 Mute
 P.Mode	 Format
 S.Mode	 Dual
 Zoom	 Shift + Eject
 Sleep	 Sleep
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Rechange
 Freeze	 Pause
 TV/Radio	 TV/R
 FAV	 Pre Ch
 Source	 AV
 Recall	 Back
 CH List	 List
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Vol+	 Vol +
 Vol-	 Vol -
 CH+	 Ch +
 CH-	 Ch -
 LCD Menu	 Menu
 EPG / DVD	 Guide



Menu

