




 

 


 



 



 








Original		Recharge		Original		Recharge	
	Audio		Audio / Lang I/II		Pause/T		Pause / Step / Freeze
	[ ]		Picture / Format		M		Menu / Home
	Power		Power		E		Exit / Cancel / Clear
	PIP		Zoom / Size		Info		Info / Angle
	V=		D.Menu / Top		Up		Up
	[≡  ]		Guide / EPG / /--		Left		Left
	Mute		Mute / Dimmer		OK		OK
	1		1		Right		Right
	2		2		Down		Down
	3		3		Red		Red / Netflix / Search
	4		4		Blue		Blue / Prime Video / Random
	5		5		Green		Green / APP / Repeat
	6		6		Yellow		Yellow / YouTube / Repeat
	7		7				
	8		8				
	9		9				
	0		0				
















 
 

 



 

 






 


 

 


 









Original	Rechange
 Audio	 Audio / Lang I/II
 [ ]	 Picture / Format
 Power	 Power
 SV/[ *]	 Zoom / Size
 LP/V=	 Setup / OPT /
 000/[≡I ]	 Guide / EPG / -/--
 Timer/Mute	 Sleep / Timer
 Timer/Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Original	Rechange
 0	 0
 Pause/T	 Pause / Step / Freeze
 M	 Menu / Home
 E	 Exit / Cancel / Clear
 Rec/i	 Info / Angle
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 <<	 << / Tune-
 >>	 >> / Tune+
 Stop	 Stop / Hold
 Play	 Play / Slow







	Original	Recharge	Original	Recharge
	Audio	 Audio / Lang I/II		Exit / Cancel / Clear
	[ ]	 Picture / Format		Rec / Rec Mode
	Power	 Power		Up
	SV	 Display / Media		Left
	LP	 Smart / List		OK
	Timer	 TV/Radio /		Right
	1	 1		Down
	2	 2		<< / Tune-
	3	 3		>> / Tune+
	4	 4		Stop / Hold
	5	 5		Play / Slow
	6	 6		
	7	 7		
	8	 8		
	9	 9		
	000	 0		
	M	 Menu / Home		

