

 
 
 




 





 

 


 










 

 








 






 



 








 
 








Original		Rechange		Original		Rechange	
	Standby		Power		0		0
	Prog		Sleep		10+		Guide
	Display		Info		Time		AV
	Open / Close		Eject		Setup		Options
	N/P		Red		Repeat		Text
	Subtitle		Subt		Up		Up
	Language		Dual		Left		Left
	Angle		Format		Play / Enter		Ok
	1		1		Play / Enter		Play
	2		2		Right		Right
	3		3		Down		Down
	4		4		Func+		Vol +
	5		5		Func-		Vol -
	6		6		Stop		Stop
	7		7		Karaoke		Green
	8		8		Zoom		Shift + Eject
	9		9		Mic		List





Original	Recharge
Resume	Ch +
PBC	Yellow
Title	Blue
A/B	TV/R
Menu	Menu
I<< Prev	I<<
Next >>I	>>I
<< REV	<<
Fwd >>	>>
Slow	Ch -
Pause	Pause
Func Select	Smart
Mute	Mute
Step	Back
Mode	D. Menu
PScan / Normal	Media

Original	Recharge

