

 
 






 











 



 


















 

 



 

Original	Rechange
 Power	 Power
 Eject	 Eject
 Sleep	 Sleep
 Display	 Info
 Tuner / Band	 Green
 Function	 Options
 I<< / Preset-	 I<<
 >>I / Preset+	 >>I
 << / Tuning- / <I Slow	 <<
 >> / Tuning+ / Slow I>	 >>
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 DVD Top Menu / Album-	 Ch -
 DVD Top Menu / Album-	 Menu
 DVD Menu / Album+	 Ch +
 DVD Menu / Album+	 D. Menu

 
Original	Rechange
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 DVD Display	 Shift + Info
 Return	 Back
 Muting	 Mute
 Vol+	 Vol +
 Vol-	 Vol -
 DVD Set Up	 List
 Auto Format	 3D
 Night Mode	 Format
 Audio	 Dual
 Angle	 Guide
 Subtitle	 Subt
 Repeat	 Text



Album+






 

 
 
 


 





 



 
 


 



 




	Original	Recharge
PLAY MODE	Play Mode	 +  Shift + Play
TV/VIDEO	TV/Video	 AV
TV	TV	 TV/R
1	1	 1
2	2	 2
3	3	 3
4	4	 4
5	5	 5
6	6	 6
7	7	 7
8	8	 8
9	9	 9
0	0	 0
ENTER	Enter	 PRE-CH
CLEAR	Clear	 EXIT
AMP MENU	AMP Menu	 SMART
TUNER MENU	Tuner Menu	 MEDIA

	Original	Recharge
FM MODE	FM Mode	 Red





	Original	Recharge		Original	Recharge
	Power Tv		Power		
	1		1		
	2		2		
	3		3		
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	0/10		0		
	-/--		Guide		
	Enter		Pre Ch		
	Tv Vol+		Vol +		
	Tv Vol-		Vol -		
	Tv CH+		Ch +		
	Tv CH-		Ch -		

