



Original	Rechange
On	Power
Standby	Shift + Power
Input Selector V1	1
Input Selector V2	4
Input Selector V3	7
Input Selector Multi CH	8
Input Selector	2
Input Selector	5
Input Selector Tuner	6
Input Selector CD	3
Dimmer	Shift + Mute / Dimmer
Sleep	Sleep / Timer
CH/Disc+	CH+ / Page+
Vol+	Vol+
CH/Disc-	CH- / Page-
Vol-	Vol-
SP A/B	Menu / Home

Original	Rechange
Up	Up
Muting	Mute / Dimmer
Left	Left
Enter	OK
Right	Right
Return	Back / Return
Down	Down
Setup	Setup / OPT /
Pause/<	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
<< / Tune-	<< / Tune-
>> / Tune+	>> / Tune+
I<< / Preset-	I<< / Preset-
>>I / Preset+	>>I / Preset+
List. Mode Stereo	Red / Netflix / Search
List. Mode	Eject / Surround

 

































 







 



 



 



 



 



 
 








Original	Recharge	Original	Recharge
 List. Mode	 Green / APP / Repeat		
 Listening Mode <	 Yellow / YouTube / Repeat		
 Listening Mode >	 Blue / Prime Video / Random		
 Test Tone	 Text / Goto		
 CH Sel	 Info / Angle		
 Level-	 Shift + Left		
 Level+	 Shift + Right		
 Display	 Display / Media		
 L.Night	 Shift + Sleep / Timer		
 Cine FLTR	 Picture / Format		











Original		Rechange		Original		Rechange	
	On		Power		Up		Up
	Standby		Shift + Power		Menu		Menu / Home
	1		1		Left		Left
	2		2		Enter		OK
	3		3		Right		Right
	4		4		Return		Back / Return
	5		5		Down		Down
	6		6		Setup		Setup / OPT /
	7		7		Pause		Pause / Step / Freeze
	8		8		Play		Play / Slow
	9		9		Stop		Stop / Hold
	+10		Guide / EPG / -/--		<<		<< / Tune-
	0		0		>>		>> / Tune+
	CLR		Exit / Cancel / Clear		I<<		I<< / Preset-
	CH/Disc+		CH+ / Page+		>>I		>>I / Preset+
	CH/Disc-		CH- / Page-		Audio		Audio / Lang I/II
	Top Menu		D.Menu / Top		Subtitle		Subtitle / EQ





Original

Recharge

	Random		Blue / Prime Video / Random
	Repeat		Green / APP / Repeat
	Display		Display / Media

Original

Recharge

