



 



 




 
















Original		Rechange		Original		Rechange	
	On / Standby		Power		CH/Disc/Album-		CH- / Page-
	Input Selector V1		1		Vol-		Vol-
	Input Selector V2		4		Guide/Top		Guide / EPG / -/-
	Input Selector V3		7		Guide/Top		D.Menu / Top
	Input Selector Multi CH		8		Up		Up
	Input Selector DVD		2		Muting		Mute / Dimmer
	Input Selector Tape		5		Left		Left
	Input Selector Tuner		6		Enter		OK
	Input Selector CD		3		Right		Right
	Dimmer		Shift + Mute / Dimmer		Return		Back / Return
	Sleep		Sleep / Timer		Down		Down
	Power Tv		Shift + Power		Setup		Setup / OPT /
	Vol+ Tv		Shift + Vol+		Pause		Pause / Step / Freeze
	CH/Disc/Album		CH+ / Page+		Play		Play / Slow
	Vol+		Vol+		Stop		Stop / Hold
	Input Tv		Shift + AV / Input / RDS		<<		<< / Tune-
	Vol- Tv		Shift + Vol-		>>		>> / Tune+





Original	Rechange
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Listening Mode Stereo	 Subtitle / EQ
 Listening Mode Surround	 Eject / Surround
 Listening Mode <	 Sound / Title
 Listening Mode >	 Audio / Lang I/II
 Test Tone	 Red / Netflix / Search
 CH Sel	 Green / APP / Repeat
 Level-	 Yellow / YouTube / Repeat
 Level+	 Blue / Prime Video / Random
 Display	 Display / Media
 L.Night	 Zoom / Size
 Cine FLTR	 Picture / Format

Original	Rechange





Original	Rechange	Original	Rechange
 Power	 Power	 Left/Playlist/Cat-	 Left
 1	 1	 Enter	 OK
 2	 2	 Right/Playlist/Cat	 Right
 3	 3	 Return	 Back / Return
 4	 4	 Down	 Down
 5	 5	 Setup	 Setup / OPT /
 6	 6	 Pause	 Pause / Step / Freeze
 7	 7	 Play	 Play / Slow
 8	 8	 Stop	 Stop / Hold
 9	 9	 <<	 << / Tune-
 +10/10/-/-	 Guide / EPG / -/-	 >>	 >> / Tune+
 0/11	 0	 I<<	 I<< / Preset-
 CLR	 Exit / Cancel / Clear	 >>I	 >>I / Preset+
 Top Menu	 D.Menu / Top	 Stereo	 Shift + Subtitle / EQ
 Up	 Up	 Surround	 Shift + Eject / Surround
 Previous Menu/Muting	 Menu / Home	 < Listening Mode	 Shift + Sound / Title
 Previous Menu/Muting	 Mute / Dimmer	 Listening Mode >	 Shift + Audio / Lang I/II

Original	Rechange	Original	Rechange
 Power	 Power	 Left/Playlist/Cat-	 Left
 1	 1	 Enter	 OK
 2	 2	 Right/Playlist/Cat	 Right
 3	 3	 Return	 Back / Return
 4	 4	 Down	 Down
 5	 5	 Setup	 Setup / OPT /
 6	 6	 Pause	 Pause / Step / Freeze
 7	 7	 Play	 Play / Slow
 8	 8	 Stop	 Stop / Hold
 9	 9	<<	<< / Tune-
+10/10/-/-	Guide / EPG / -/-	>>	>> / Tune+
0/11	0	I<<	I<< / Preset-
CLR	Exit / Cancel / Clear	>>I	>>I / Preset+
Top Menu	D.Menu / Top	Stereo	Shift + Subtitle / EQ
Up	Up	Surround	Shift + Eject / Surround
Previous Menu/Muting	Menu / Home	< Listening Mode	Shift + Sound / Title
Previous Menu/Muting	Mute / Dimmer	Listening Mode >	Shift + Audio / Lang I/II



 




















 

	Original	Rechange
	On / Standby	Power
	1	1
	2	2
	3	3
	4	4
	5	5
	6	6
	7	7
	8	8
	9	9
	+10/10/-/-	Guide / EPG / -/-
	0/11	0
	12	Fav / Marker / PC
	Disc+	CH+ / Page+
	Vol+	Vol+
	Disc-	CH- / Page-
	Vol-	Vol-

	Original	Rechange
	Pause	Pause / Step / Freeze
	Play	Play / Slow
	Stop	Stop / Hold
	<<	<< / Tune-
	>>	>> / Tune+
	I<<	I<< / Preset-
	>>I	>>I / Preset+
	Stereo	Subtitle / EQ
	Surround	Eject / Surround
	< Listening Mode	Sound / Title
	Listening Mode >	Audio / Lang I/II
	Random	Blue / Prime Video / Random
	Repeat	Green / APP / Repeat
	Display	Display / Media





Original	Rechange
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 +10/10/--	 Guide / EPG / --
 0/11	 0
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold

Original	Rechange
	 << / Tune-
 Stereo	 Subtitle / EQ
 Surround	 Eject / Surround
 < Listening Mode	 Sound / Title
 Listening Mode >	 Audio / Lang I/II
 Play Mode	 D.Menu / Top
 L.Night	 Sleep / Timer

