





 


 

 
 
 
 


 
 
 
 





 

 





 






 

 


 

 
 
 
 

 
 
 
 
 
 
 

 










Original	Recharge
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Recall	 Pre Ch
 Input	 AV
 Tv	 TV/R
 PC	 Smart
 AV Mode	 3D

Original	Recharge
 Sleep	 Sleep
 Vol+	 Vol +
 Vol-	 Vol -
 Freeze	 Shift + Media
 View Mode	 Media
 CH+	 Ch +
 CH-	 Ch -
 Surround	 Dual
 MPX	 Format
 Display	 Info
 Menu	 Menu
 Exit	 Exit
 Return	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left





Original		Recharge		Original		Recharge	
	Enter		Ok				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	[≡]		Text				
	[...]		Subt				
	USB		Options				
	Stop		Stop				
	[≡◆]		List				
	[≡+]		Guide				
	<<		<<				
	>>		>>				
	[≡?]		D. Menu				
	[≡o]		Eject				
	Pause		Pause				
	Play		Play				

