










 

 

 

















 




 
 



 

 

 



 



 



 




 









 














 

 







 
 
 




Original	Rechange	Original	Rechange
 Power	 Power	 Stop	 Stop
 FL Display	 Smart	 Pause	 Pause
 TUNER BAND	 Green	 Play	 Play
 AUX	 Red	 Disc Skip	 Sleep
 Top Menu	 D. Menu	 SFC	 Eject
 Menu	 Menu	 CH-	 Ch -
 Up	 Up	 CH+	 Ch +
 Left	 Left	 Vol+	 Vol +
 Enter	 Ok	 Vol-	 Vol -
 Right	 Right	 Muting	 Mute
 Down	 Down	 Subwoofer	 Shift + 4
 Display	 Info	 Action	 Options
 Return	 Back	 Subtitle	 Subt
 I<<	 I<<	 Audio	 Dual
 >>I	 >>I	 Angle	 Format
 <<	 <<	 Marker	 3D
 >>	 >>	 CH Select	 Shift + Media











 








 
 




 
 
 


 










Original	Rechange	Original	Rechange
 Power	 Power		
 TV Vol-	 Vol -		
 TV Vol+	 Vol +		
 TV / Video	 AV		
 CH+	 Ch +		
 CH-	 Ch -		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 ≥10	 Guide		





	Original	Recharge		Original	Recharge
	Power		Power		Play
	1		1		
	2		2		
	3		3		
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	0		0		
	≥10		Guide		
	CH+		Ch +		
	CH-		Ch -		
	Stop		Stop		
	<<		<<		
	>>		>>		

