







 





 



 

















 











Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop/Rec	 Stop / Hold
 Reg Rapide	 Rec / Rec Mode
 <<<	 <<< / Tune-
 >>>	 >>> / Tune+
 S.Mode	 Sound / Title
 I/II/Audio	 Audio / Lang I/II
 SS-Titre	 Subtitle / EQ
 P.Mode	 Picture / Format
 Minuterie	 Sleep / Timer
 Text	 Text / Goto
 Source	 AV / Input / RDS
 Menu	 Menu / Home
 Up	 Up

Original	Rechange
 Info	 Info / Angle
 Left	 Left
 OK/Liste	 OK
 Right	 Right
 Down	 Down
 Retour	 Back / Return
 Vol+	 Vol+
 Index	 Smart / List
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Plus	 Display / Media
 CH-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5





Original		Recharge	
	6		6
	7		7
	8		8
	9		9
	Guide		Guide / EPG / -/--
	0		0
	Recall		Fav / Marker / PC
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Ratio		Shift + Picture / Format
	TV		Shift + 1

Original		Recharge	

