










 
 







 


 

 
 












Original	Rechange
 Power	 Power
 i	 DISPLAY INFO
 Input Select	 TIMER AV
 Picture Size	 PICTURE FORMAT
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Timer	 SHIFT +  Shift + AV
 Mute	 MUTE
 [≡o] [≡o]/P↔P	 RETURN BACK

Original	Rechange
 Audio I/II	 SOUND DUAL
 [≡?] ]	 SETTINGS OPT
 [≡♦]	 ECO 3D
 Menu	 TOP MENU MENU
 [≡]	 REPEAT TEXT
 P+	 + CH
 Up	
 P-	
 Down	
 Vol+	 + VOL
 Right	
 Vol-	
 Left	
 Enter/CH List	 OK
 Exit	 CLEAR EXIT
 Freeze / [≡+] ]	 FAV PRE-CH
 Red	 A



