 

 
 


 


 
 
 
 


 



 



 








 

 


 



 
 

 


 



 





 


 
 










Original		Rechange		Original		Rechange	
	Standby		Power		Display		Info
	Mute		Mute		Tv/Radio		TV/R
	1		1		Menu		Menu
	2		2		Exit		Exit
	3		3		Up		Up
	4		4		Down		Down
	5		5		Right		Right
	6		6		Left		Left
	7		7		OK		Ok
	8		8		FAV		Shift + Pre Ch
	9		9		Rec		Rec
	0/10		0		Media		Media
	Recall/+10		Pre Ch		Vol+		Vol +
	Rec List		List		Vol-		Vol -
	EPG		Guide		CH+		Ch +
	Subtitle		Subt		CH-		Ch -
	Audio		Dual		Source		AV



