



Original	Rechange	Original	Rechange
 Power	 Power	 Home	 Smart
 Volume+	 Vol +	 Stop	 Stop
 Volume-	 Vol -	 Pause	 Pause
 Mute	 Mute	 Play	 Play
 Sleep	 Sleep	 I<</Tune-	 I<<
 Eco	 3D	 >>/Tune+	 >>I
 CH/Page+	 Ch +	 <<	 <<
 CH/Page-	 Ch -	 >>	 >>
 Info	 Info	 Smart Select 1	 D. Menu
 Option	 Options	 Smart Select 2	 Text
 Back	 Back	 Smart Select 3	 Eject
 Setup	 Menu	 Smart Select 4	 AV
 Up	 Up	 Green/Movie	 Green
 Down	 Down	 Red/Music	 Red
 Right	 Right	 Blue/Game	 Blue
 Left	 Left	 Yellow/Pure	 Yellow
 Enter	 Ok	 1	 1





Original	Rechange
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
CBL/SAT	SHIFT + 1 Shift + 1
DVD	SHIFT + 2 Shift + 2
Tv Audio	SOUND DUAL Dual
Blu-ray	SHIFT + 3 Shift + 3
AUX	SHIFT + 4 Shift + 4
Tuner	SHIFT + 5 Shift + 5
Bluetooth	SHIFT + 6 Shift + 6
Game	SHIFT + 7 Shift + 7

Original	Rechange
8K	SHIFT + 8 Shift + 8
Phono	SHIFT + 9 Shift + 9
USB	SHIFT + GUIDE Shift + Guide
Media Player	FAV PRE-CH Pre Ch
CD	GUIDE Guide
..:.	SHIFT + 0 Shift + 0
Internet Radio	SHIFT + FAV PRE-CH Shift + Pre Ch






Original	Rechange	Original	Rechange
 Power	 Power	 >>	 >>
 Volume+	 Vol +	 <<	 <<
 Volume-	 Vol -	 >> Tune+	 >>
 Mute	 Mute	  <</Tune-	  <<
 Sleep	 Sleep	 Smart Select 1	 D. Menu
 CH/Page+	 Ch +	 Smart Select 2	 Text
 CH/Page-	 Ch -	 Smart Select 3	 Eject
 Back	 Back	 Smart Select 4	 AV
 Up	 Up	 1	 1
 Down	 Down	 2	 2
 Right	 Right	 3	 3
 Left	 Left	 4	 4
 Enter	 Ok	 5	 5
 Home	 Smart	 6	 6
 Stop	 Stop	 7	 7
 Pause	 Pause	 8	 8
 Play	 Play	 9	 9





Original	Recharge
	
 Tv Audio	 Dual
	 Shift + Guide
	 Pre Ch
	 Shift + 1
	 Shift + 2
	 Shift + 3
	 Shift + 4
	 Shift + 5
	 Shift + 6
	 Shift + 7
	 Shift + 8
	 Shift + 9
	 Guide
	 Shift + 0
	 Shift + Pre Ch

Original	Recharge





	Original	Rechange	Original	Rechange
	Power			>>
	Volume+			<<
	Volume-			>> /Tune+
	Mute			<</Tune-
	Sleep			1
	CH/Page+			Smart Select 1
	CH/Page-			Smart Select 2
	Back			Smart Select 3
	Up			Smart Select 4
	Down			2
	Right			3
	Left			4
	Enter			5
	Home			6
	Stop			7
	Pause			8
	Play			9





Original		Rechange	
	0		0
	Tv Audio		Dual
	CBL/SAT		Shift + 1
	DVD		Shift + 2
	Blu-ray		Shift + 3
	AUX		Shift + 4
	Tuner		Shift + 5
	Bluetooth		Shift + 6
	Game		Shift + 7
	8K		Shift + 8
	Phono		Shift + 9
	USB		Shift + Guide
	Media Player		Pre Ch
	CD		Guide
	Internet Radio		Shift + 0
			Shift + Pre Ch

Original		Rechange	

