



Original		Rechange		Original		Rechange	
	Power		Power		Left		Left
	Mute		Mute		OK		Ok
	1		1		Right		Right
	2		2		Down		Down
	3		3		Menu		Menu
	4		4		Exit		Exit
	5		5		Vol+		Vol +
	6		6		Vol-		Vol -
	7		7		P.Mode		Format
	8		8		S.Mode		Dual
	9		9		CH+		Ch +
	0		0		CH-		Ch -
	-		Guide		Input		Shift + AV
	Recall		Back		Fav / Angle		Pre Ch
	Source		AV		Zoom		Eject
	Display		Info		Sleep		Sleep
	Up		Up		Red		Red





Original		Rechange		Original	Rechange
	Green / 3D		Green		
	Green / 3D		3D		
	Yellow		Yellow		
	Blue		Blue		
	Play / Pause		Play		
	Play / Pause		Pause		
	FR		<<		
	FF		>>		
	Stop		Stop		
	Prev		I<<		
	Next		>>I		
	Media		Media		
	Keyboard		Text		
	PC		D. Menu		
	Refresh		List		
	Search		TV/R		
	Home		Smart		

