



Original		Rechange		Original		Rechange	
	Power Receiver		Power		Loudness		Subtitle / EQ
	Input Sel		AV / Input / RDS		Test Tone		Text / Goto
	Standard		Sound / Title		Left/ST-		Left
	Stereo		Audio / Lang I/II		Right/ST+		Right
	ADV Surr.		Eject / Surround		CH Select		Smart / List
	Master		Vol+		Midnight		Sleep / Timer
	Master Volume-		Vol-		ATT		D.Menu / Top
	Enter		OK		Signal Select		Menu / Home
	Remote Setup		Setup / OPT /		CH Level+		CH+ / Page+
	Effect-		I<< / Preset-		CH Level-		CH- / Page-
	Effect+		>>I / Preset+		TV		1
	Mute		Mute / Dimmer		CD-R		3
	DVD		2		Power TV		Shift + Power
	VCR		4		1 Tv		Shift + 1
	TUN		6		2 Tv		Shift + 2
	Up/Tune+		Up		3 Tv		Shift + 3
	Down/Tune-		Down		4 Tv		Shift + 4





Original	Rechange
5 Tv	+ Shift + 5
6 Tv	+ Shift + 6
7 Tv	+ Shift + 7
9 Tv	+ Shift + 9
8 Tv	+ Shift + 8
0 Tv	+ Shift + 0
+10 Tv	+ Shift + Guide / EPG / -/-
Menu Tv	+ Shift + Menu /
Tv Input	+ Shift + AV / Input / RDS
Tv Vol+	+ Shift + Vol+
Tv Vol-	+ Shift + Vol-
Channel + Tv	+ Shift + CH+ /
Channel - Tv	+ Shift + CH- /
Up Tv	+ Shift + Up
Down Tv	+ Shift + Down
Enter Tv	+ Shift + OK
Right Tv	+ Shift + Right

Original	Rechange
Left Tv	+ Shift + Left
Pause/T.Edit Tv	+ Shift + Pause / Step /
Play/D.Access Tv	+ Shift + Play /
Stop/MPX Tv	+ Shift + Stop /
>>I/RF ATT Tv	+ Shift + >>I / Preset+
I<</Display Tv	+ Shift + I<< / Preset-
>>/Class Tv	+ Shift + >> /
<</Band Tv	+ Shift + << /
Rec Tv	+ Shift + Rec / Rec Mode
Disc Tv	+ Shift + Fav / Marker / PC





Original	Rechange	Original	Rechange
Power DVD	Power	Menu DVD	Menu / Home
Angle	Info / Angle	Master	Vol+
Subtitle	Subtitle / EQ	Master volume-	Vol-
Audio	Audio / Lang I/II	Mute	Mute / Dimmer
Top Menu	D.Menu / Top	Channel+ DVD	CH+ / Page+
1 DVD	1	Channel- DVD	CH- / Page-
2 DVD	2	Up DVD	Up
3 DVD	3	Down DVD	Down
4 DVD	4	Right DVD	Right
5 DVD	5	Left DVD	Left
6 DVD	6	Enter DVD	OK
7 DVD	7	Pause DVD	Pause / Step / Freeze
8 DVD	8	Rec DVD	Rec / Rec Mode
9 DVD	9	Play DVD	Play / Slow
0 DVD	0	<< DVD	<< / Tune-
+10 DVD	Guide / EPG / -/--	>> DVD	>> / Tune+
Disc DVD	Fav / Marker / PC	Stop DVD	Stop / Hold





 














 



 

 



 






 

 






 
 

 


 













Original	Rechange	Original	Rechange
>>I DVD	>>I / Preset+	Down VCR	Shift + Down
I<< DVD	I<< / Preset-	Right VCR	Shift + Right
Power VCR	Shift + Power	Left VCR	Shift + Left
1 VCR	Shift + 1	Enter VCR	Shift + OK
2 VCR	Shift + 2	Pause VCR	Shift + Pause / Step /
3 VCR	Shift + 3	Play VCR	Shift + Play /
4 VCR	Shift + 4	Stop VCR	Shift + Stop /
5 VCR	Shift + 5	<< VCR	Shift + << /
6 VCR	Shift + 6	>>I VCR	Shift + >>I / Preset+
7 VCR	Shift + 7	>> VCR	Shift + >> /
8 VCR	Shift + 8	I<< VCR	Shift + I<< / Preset-
9 VCR	Shift + 9	Rec VCR	Shift + Rec / Rec Mode
0 VCR	Shift + 0		
Disc VCR	Shift + Fav / Marker / PC		
Channel+ VCR	Shift + CH+ /		
Channel- VCR	Shift + CH- /		
Up VCR	Shift + Up		



 







 



 

 







 











 

 
 

 

 





Original		Rechange		Original		Rechange	
	Power CD		Power		Channel- CD		CH- / Page-
	1 CD		1		Up CD		Up
	2 CD		2		Down CD		Down
	3 CD		3		Right CD		Right
	4 CD		4		Left CD		Left
	5 CD		5		Enter CD		OK
	6 CD		6		Pause CD		Pause / Step / Freeze
	7 CD		7		Play CD		Play / Slow
	8 CD		8		<< CD		<< / Tune-
	9 CD		9		>> CD		>> / Tune+
	0 CD		0		Stop CD		Stop / Hold
	+10 CD		Guide / EPG / -/--		I<< CD		I<< / Preset-
	Disc CD		Fav / Marker / PC		>>I CD		>>I / Preset+
	Master		Vol+		Power TVC		Shift + Power
	Master Volume-		Vol-		1 TVC		Shift + 1
	Mute		Mute / Dimmer		2 TVC		Shift + 2
	Channel+ CD		CH+ / Page+		3 TVC		Shift + 3





Original	Rechange
 Power TUN	 Power
 1 TUN	 1
 2 TUN	 2
 3 TUN	 3
 4 TUN	 4
 5 TUN	 5
 6 TUN	 6
 7 TUN	 7
 8 TUN	 8
 9 TUN	 9
 0 TUN	 0
 Master	 Vol+
 Master volume-	 Vol-
 Mute	 Mute / Dimmer
 TUNE+ TUN	 >> / Tune+
 TUNE- TUN	 << / Tune-
 ST+ TUN	 >>I / Preset+

Original	Rechange
 ST- TUN	 I<< / Preset-
 D.Access TUN	 Play / Slow
 Band TUN	 Pause / Step / Freeze
 Class TUN	 Stop / Hold
 MPX TUN	 Rec / Rec Mode
 Display TUN	 Display / Media
 RF ATT TUN	 Smart / List
 Power CDR	 Shift + Power
 1 CDR	 Shift + 1
 2 CDR	 Shift + 2
 3 CDR	 Shift + 3
 4 CDR	 Shift + 4
 5 CDR	 Shift + 5
 6 CDR	 Shift + 6
 7 CDR	 Shift + 7
 8 CDR	 Shift + 8
 9 CDR	 Shift + 9



