

















 

 

 

Original	Rechange
Power	Power
Input	AV / Input / RDS
Audio / Nicam/A2	Audio / Lang I/II
Aspect	Zoom / Size
P.Mode	Picture / Format
S.Mode	Sound / Title
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
--/--	Shift + Guide / EPG / --/--
0	0

Original	Rechange
Recall	Back / Return
FAV	Fav / Marker / PC
Freeze	Shift + Pause / Step /
TV/Radio / DVD Title	TV/Radio /
TV/Radio / DVD Title	Shift + Sound / Title
Red / Angle	Red / Netflix / Search
Red / Angle	Shift + Info / Angle
Green / Language	Green / APP / Repeat
Green / Language	Shift + Audio / Lang I/II
Yellow / DVD	Yellow / YouTube / Repeat
Yellow / DVD	Setup / OPT /
Blue / DVD	Blue / Prime Video / Random
Blue / DVD	D.Menu / Top
Sleep	Sleep / Timer
Up	Up
EPG	Guide / EPG / --/--
Left	Left





Original	Recharge
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 Display	 Info / Angle
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 CH-	 CH- / Page-
 Play/Pause / Hold	 Play / Slow
 Play/Pause / Hold	 Shift + Stop /
 Play/Pause / Hold	 Pause / Step / Freeze
 << / Reveal	 << / Tune-
 >> / Size	 >> / Tune+
 Stop / Index	 Stop / Hold

Original	Recharge
 I<<	 I<< / Preset-
 >>I / S.Page	 >>I / Preset+
 TTX / A-B	 Text / Goto
 TTX / A-B	 Shift + YouTube / Repeat A-B
 T.Shift	 Display / Media
 Open / Close	 Eject / Surround
 Subtitle	 Subtitle / EQ
 Rec / Auto	 Rec / Rec Mode
 List / Repeat	 Smart / List
 List / Repeat	 Shift + Green / APP / Repeat

