




















Original	Rechange
 Power	 Power
 Info	 Info / Angle
 Mute	 Mute / Dimmer
 I - II	 Audio / Lang I/II
 Fav	 Fav / Marker / PC
 AV / Source	 AV / Input / RDS
 TV / DTV	 TV/Radio /
 1	 1
 2	 2
 3	 3
 Red / Page+	 Red / Netflix / Search
 Red / Page+	 Shift + CH+ /
 4	 4
 5	 5
 6	 6
 Green / Page-	 Shift + CH- /
 Green / Page-	 Green / APP / Repeat

Original	Rechange
 7	 7
 8	 8
 9	 9
 Yellow	 Yellow / YouTube / Repeat
 -/-- / Exit	 Shift + Guide / EPG / -/--
 -/-- / Exit	 Exit / Cancel / Clear
 0	 0
 M	 Menu / Home
 Blue	 Blue / Prime Video / Random
 Up	 Up
 Left	 Left
 OK / Select	 OK
 Right	 Right
 Down	 Down
 P+	 CH+ / Page+
 P-	 CH- / Page-
 V-	 Vol-





Original	Recharge	Original	Recharge
	V+		Size / Wide
	Stop		Zoom / Size
	Play		Shift + AV / Input / RDS
	Pause		Guide / EPG / -/-
	LIB		Picture / Format
	Rec		
	<<		
	>>		
	Time		
	PIP-		
	PIP+		
	P<P / Swap		
	PP		
	Text		
	Subpage		
	Hold		
	Cancel		
	Vol+		
	Stop / Hold		
	Play / Slow		
	Pause / Step / Freeze		
	Display / Media		
	Rec / Rec Mode		
	<< / Tune-		
	>> / Tune+		
	Sleep / Timer		
	I<< / Preset-		
	>>I / Preset+		
	Back / Return		
	Eject / Surround		
	Text / Goto		
	Subtitle / EQ		
	Shift + Stop		
	Shift + Exit / Cancel / Clear		

