




Original		Rechange		Original		Rechange	
	Standby		Power		Aspect		Shift + Picture / Format
	Auto		Smart / List		Nicam		Audio / Lang I/II
	Mute		Mute / Dimmer		Display		Display / Media
	1		1		CH+		CH+ / Page+
	2		2		CH-		CH- / Page-
	3		3		Up		Up
	4		4		Left		Left
	5		5		Enter		OK
	6		6		Right		Right
	7		7		Down		Down
	8		8		LCD Menu		Menu / Home
	9		9		Exit		Exit / Cancel / Clear
	0		0		Input		AV / Input / RDS
	-/--		Shift + Guide / EPG / -/--		PMode		Picture / Format
	Recall		Back / Return		SMODE		Sound / Title
	Vol+		Vol+		Sleep		Sleep / Timer
	Vol-		Vol-		Fav		Fav / Marker / PC





	Original	Rechange	Original	Rechange
	Fav-	 I<< / Preset-		
	EPG	 Guide / EPG / -/--		
	Text	 Text / Goto		
	Fav+	 >>I / Preset+		
	Hold	 Stop / Hold		
	Lang	 Shift + Audio / Lang I/II		
	Subtitle	 Subtitle / EQ		
	Index	 Info / Angle		
	Size	 Zoom / Size		
	Reveal	 TV/Radio /		
	Subpage	 Eject / Surround		
	Red	 Red / Netflix / Search		
	Green	 Green / APP / Repeat		
	Yellow	 Yellow / YouTube / Repeat		
	Blue	 Blue / Prime Video / Random		

