















 


 





Original	Recharge	Original	Recharge
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Info / Angle		Right
	Text / Goto		Left
	Shift + Yellow / YouTube /		OK
	Shift + Red / Netflix /		Back / Return
	Shift + Green / APP /		TV/Radio /
	Shift + Blue / Prime Video / Random		Shift + Menu / Home





Original		Recharge		Original		Recharge	
	Vol+		Vol+				
	Vol-		Vol-				
	Mute		Mute / Dimmer				
	Recall		Fav / Marker / PC				
	CH+		CH+ / Page+				
	CH-		CH- / Page-				
	Audio		Audio / Lang I/II				
	[...]		Subtitle / EQ				
	Help		Zoom / Size				
	<<		<< / Tune-				
	Play		Play / Slow				
	>>		>> / Tune+				
	Rec		Rec / Rec Mode				
	Pause		Pause / Step / Freeze				
	Exit		Exit / Cancel / Clear				

