




























 



 





Original	Recharge	Original	Recharge
 Power	 Power	 Red	 Red / Netflix / Search
 1	 1	 Green	 Green / APP / Repeat
 2	 2	 Yellow	 Yellow / YouTube / Repeat
 3	 3	 Blue	 Blue / Prime Video / Random
 4	 4	 Guide	 Guide / EPG / -/-
 5	 5	 Rec List	 Smart / List
 6	 6	 Source	 AV / Input / RDS
 7	 7	 *	 Menu / Home
 8	 8	 Micro	 Display / Media
 9	 9	 Up	 Up
 0	 0	 Down	 Down
 [i+]	 Info / Angle	 Right	 Right
 [=]	 Text / Goto	 Left	 Left
 YouTube	 Shift + Yellow / YouTube /	 OK	 OK
 Netflix	 Shift + Red / Netflix /	 Back	 Back / Return
 Disney Plus	 Shift + Green / APP /	 TV	 TV/Radio /
 prime video	 Shift + Blue / Prime Video / Random	 Home	 Shift + Menu / Home





Original		Recharge		Original		Recharge	
	Vol+		Vol+				
	Vol-		Vol-				
	Mute		Mute / Dimmer				
	Recall		Fav / Marker / PC				
	CH+		CH+ / Page+				
	CH-		CH- / Page-				
	Audio		Audio / Lang I/II				
	[...]		Subtitle / EQ				
	Help		Zoom / Size				
	<<		<< / Tune-				
	Play		Play / Slow				
	>>		>> / Tune+				
	Rec		Rec / Rec Mode				
	Pause		Pause / Step / Freeze				
	Exit		Exit / Cancel / Clear				

