






 


















 











Original	Rechange
 i	 ANGLE INFO Info / Angle
 Power	 Power
 Aa	 GOTO TEXT Text / Goto
 Lang	 LANG I/II AUDIO Audio / Lang I/II
 DVD	 SHIFT + DVD 2 Shift + 2
 Open / Close	 SURROUND Eject / Surround
 1	 TV 1
 2	 DVD 2
 3	 CD - STB 3
 4	 VIDEO 4
 5	 TAPE 5
 6	 TUNER 6
 7	 AUX - HDD 7
 8	 USB 8
 9	 BLUETOOTH 9
 Thumb Up	 MEDIA DISPLAY Display / Media
 0	 HDMI - BAT 0

Original	Rechange
 Home	 SHIFT + HOME MENU Shift + Menu /
 Home	 LIST SMART Smart / List
 Back	 RETURN BACK Back / Return
 Menu	 HOME MENU Menu / Home
 Zoom	 SIZE ZOOM Zoom / Size
 Option	 OPT-TOOLS SETUP Setup / OPT /
 Up / CH+	 Up
 Up / CH+	 CH PAGE CH+ / Page+
 Left	 Left
 OK	 OK
 Right	 Right
 Down / CH-	 Down
 Down / CH-	 CH PAGE CH- / Page-
 Vol+	 + VOL Vol+
 Mute	 DIMMER MUTE Mute / Dimmer
 DTV	 PROGRAM TV/RADIO TV/Radio /
 Vol-	 - VOL Vol-





Original	Rechange	Original	Rechange
	Random		Shift + Blue / Prime
	EPG		Guide / EPG / -/--
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Slow		Shift + Play /
	I< / O'Replay		I<< / Preset-
	Stop		Stop / Hold
	>		>> / Preset+
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

