 





 




 

 

 



 



 








Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Audio	 Audio / Lang I/II
 Recall	 Back / Return
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Info	 Info / Angle

Original	Rechange
 EPG	 Guide / EPG / -/--
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK
 SAT	 Shift + 0
 FAV	 Fav / Marker / PC
 Tv/Radio	 TV/Radio /
 Subtitle	 Subtitle / EQ
 Find	 Smart / List
 Pg Up	 CH+ / Page+
 PgDn	 CH- / Page-
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random





Original		Recharge		Original		Recharge	
	<<		<< / Tune-				
	>>		>> / Tune+				
	<		<< / Preset-				
	>		>> / Preset+				
	Play		Play / Slow				
	Pause		Pause / Step / Freeze				
	Rec		Rec / Rec Mode				
	Stop		Stop / Hold				
	Text		Text / Goto				

