





 



 

 

 

 











 

 









Original	Recharge
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 EPG	 Guide / EPG / -/--
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 APPS	 Shift + Green / APP / Repeat

Original	Recharge
 Home	 Shift + Menu /
 P+	 CH+ / Page+
 P-	 CH- / Page-
 Menu	 Menu / Home
 i	 Info / Angle
 Back	 Back / Return
 Mouse	 Display / Media
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK
 Netflix	 Shift + Red / Netflix /
 YouTube	 Shift + Yellow / YouTube /
 prime video	 Shift + Blue / Prime
 f	 Smart / List
 Red	 Red / Netflix / Search





Original	Recharge
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Pause	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
<<<	<<< / Tune-
>>>	>>> / Tune+
Text	Text / Goto
Rec	Rec / Rec Mode
I<<<	I<<< / Preset-
>>>I	>>>I / Preset+
MTS	Fav / Marker / PC
Sub	Subtitle / EQ

Original	Recharge

