



 



 











 

















 































Original		Recharge		Original		Recharge	
	Power		Power		CD		Shift + 3
	Sleep		Sleep / Timer		Tape		Shift + 5
	Audio Muting		Mute / Dimmer		DAT		Shift + 2
	Vol+		Vol+		1 CD		1
	Vol-		Vol-		2 CD		2
	Super Bass		Audio / Lang I/II		3 CD		3
	Source Direct		AV / Input / RDS		4 CD		4
	Bass+		Up		5 CD		5
	Bass-		Down		6 CD		6
	Treble+		CH+ / Page+		7 CD		7
	Treble-		CH- / Page-		8 CD		8
	Balance L		Left		9 CD		9
	Balance R		Right		0 CD		0
	Tuner Preset Up		Shift + >> / Preset+		+10 CD		Guide / EPG / -/-
	Tuner Preset		Shift + <<< / Preset-		Play CD		Play / Slow
	AUX		Shift + 7		Pause CD		Pause / Step / Freeze
	Tuner		Shift + 6		Stop CD		Stop / Hold





Original		Rechange	
	Open/Close CD		Eject / Surround
	I << CD		I << / Preset-
	>> I CD		>> I / Preset+
	< Deck A		Shift + Left
	Deck A >		Shift + Right
	<< Deck A		Shift + Down
	Deck A >>		Shift + Up
	Stop Deck A		OK
	< Deck B		Shift + Pause / Step /
	Deck B >		Shift + Play /
	<< Deck B		<< / Tune-
	Stop Deck B		Shift + Stop /
	Deck B >>		>> / Tune+
	Rec/Pause Deck B		Rec / Rec Mode

Original	Rechange

