



 







 

 

 

 



 

 



 

 

 

 
 
 



 


 




 
 


 

 



 



 
 








Original		Recharge		Original		Recharge	
	Power		Power		Vol-		Vol-
	Source		AV / Input / RDS		PR+		CH+ / Page+
	1		1		PR-		CH- / Page-
	2		2		Media.P		Display / Media
	3		3		Menu		Menu / Home
	4		4		HDMI		Shift + 0
	5		5		Tools		Setup / OPT /
	6		6		Info		Info / Angle
	7		7		Return		Shift + Back / Return
	8		8		Exit		Exit / Cancel / Clear
	9		9		Up		Up
	0		0		Down		Down
	TTX/MIX		Text / Goto		Left		Left
	PRE-CH		Back / Return		Right		Right
	Mute		Mute / Dimmer		Enter		OK
	CH List		Smart / List		Red/A		Red / Netflix / Search
	Vol+		Vol+		Green/B		Green / APP / Repeat





Original	Recharge	Original	Recharge
Yellow/C	Yellow / YouTube / Repeat		
Blue/D	Blue / Prime Video / Random		
P.Mode	Picture / Format		
P.Size	Zoom / Size		
SRS	Sound / Title		
Stop	Stop / Hold		
<<	<< / Tune-		
Play	Play / Slow		
Pause	Pause / Step / Freeze		
>>	>> / Tune+		

