

 
 
 



 




 


 


 



 
 





















	Original	Rechange		Original	Rechange
	Standby FM-AM		Power		AMS/-/-- FM-AM
	Volume Down		Vol-		Memo/CH/PGM
	Volume Up		Vol+		Fav / Marker / PC
	L FM-AM		Left		CH+ / Page+
	R FM-AM		Right		CH- / Page-
	Front		Up		Mute FM-AM
	Rear		Down		Mute / Dimmer
	1 FM-AM		1		Mode FM-AM
	2 FM-AM		2		D.Menu / Top
	3 FM-AM		3		Deck A
	4 FM-AM		4		Deck B
	5 FM-AM		5		Green / APP / Repeat
	6 FM-AM		6		Blue / Prime Video / Random
	7 FM-AM		7		Yellow / YouTube / Repeat
	8 FM-AM		8		PROGRAM TV/RADIO /
	9 FM-AM		9		LIST Smart / List
	10/0 FM-AM		0		SIZE Zoom / Size
					1 Phono
					2 Phono
					Shift + 1
					Shift + 2





	Original	Rechange
	3 Phono	+ Shift + 3
	4 Phono	+ Shift + 4
	5 Phono	+ Shift + 5
	6 Phono	+ Shift + 6
	7 Phono	+ Shift + 7
	8 Phono	+ Shift + 8
	9 Phono	+ Shift + 9
	10/0 Phono	+ Shift + 0
	Memo/CH/PGM	+ Shift + Fav / Marker / PC
	Mute Phono	+ Shift + Mute / Dimmer
	Play Phono	Play / Slow
<< Phono button"/>	<< Phono	<< / Tune-
>> Phono button"/>	>> Phono	>> / Tune+
	Pause Phono	Pause / Step / Freeze
	Stop Phono	Stop / Hold
	L Phono	+ Shift + Left
	R Phono	+ Shift + Right

	Original	Rechange
	Volume Up	+ Shift + Vol+
	Volume Down	+ Shift + Vol-





Original	Rechange	Original	Rechange
Standby CD	Power	1 CD	1
Volume Down	Vol-	2 CD	2
Volume Up CD	Vol+	3 CD	3
CD	Yellow / YouTube / Repeat	4 CD	4
Deck A	Red / Netflix / Search	5 CD	5
Deck B	Green / APP / Repeat	6 CD	6
FM/AM	Blue / Prime Video / Random	7 CD	7
VCR	Smart / List	8 CD	8
TV	TV/Radio /	9 CD	9
Tape	Display / Media	10/0	0
Phono	Zoom / Size	AMS/-/- CD	Guide / EPG / -/-
CDV	AV / Input / RDS	Memo/CH/PGM	Fav / Marker / PC
L CD	Left	Play CD	Play / Slow
R CD	Right	Pause CD	Pause / Step / Freeze
+ CD	CH+ / Page+	Stop CD	Stop / Hold
- CD	CH- / Page-	<< CD	<< / Tune-
Mute CD	Mute / Dimmer	>> CD	>> / Tune+





Original	Recharge
Standby VCR	Shift + Power
Volume Down	Shift + Vol-
Volume Up VCR	Shift + Vol+
L VCR	Shift + Left
R VCR	Shift + Right
+ VCR	Shift + CH+ /
- VCR	Shift + CH- /
Mute VCR	Shift + Mute / Dimmer
Mode VCR	Shift + D.Menu / Top Menu
1 VCR	Shift + 1
2 VCR	Shift + 2
3 VCR	Shift + 3
4 VCR	Shift + 4
6 VCR	Shift + 6
5 VCR	Shift + 5
7 VCR	Shift + 7
8 VCR	Shift + 8

Original	Recharge
9 VCR	Shift + 9
10/0 VCR	Shift + 0
AMS/-/- VCR	Shift + Guide / EPG / -/-
Memo/CH/PGM	Shift + Fav / Marker / PC
Play VCR	Shift + Play /
Pause VCR	Shift + Pause / Step /
Stop VCR	Shift + Stop /
<> VCR	Shift + >> / Preset+
>> VCR	Shift + >> /
<< VCR	Shift + << /
Rec VCR	Shift + Rec / Rec Mode





	Original	Rechange	Original	Rechange
	Standby			CH+ / Page+
	Volume Up			CH- / Page-
	Volume Down			Mute / Dimmer
	Deck A			Guide / EPG / -/--
	Deck B			Fav / Marker / PC
	L			Play / Slow
	R			Pause / Step / Freeze
	1			>> / Tune+
	2			<< / Tune-
	3			Rec / Rec Mode
	4			Stop / Hold
	5			I<< / Preset-
	6			Yellow / YouTube / Repeat
	7			Blue / Prime Video / Random
	8			TV/Radio /
	9			Smart / List
	10/0			Display / Media





	Original	Rechange
	Phono	Zoom / Size
	CDV	AV / Input / RDS

	Original	Rechange





 


 


 


 

 


 

 

 








 




	Original	Recharge		Original	Recharge
	Deck A	 Red / Netflix / Search		Mode TV	 Shift + D.Menu / Top Menu
	Deck B	 Green / APP / Repeat		1 TV	 Shift + 1
	FM/AM	 Blue / Prime Video / Random		2 TV	 Shift + 2
	CD	 Yellow / YouTube / Repeat		3 TV	 Shift + 3
	TV	 TV/Radio /		4 TV	 Shift + 4
	Tape	 Display / Media		5 TV	 Shift + 5
	VCR	 Smart / List		6 TV	 Shift + 6
	CDV	 AV / Input / RDS		7 TV	 Shift + 7
	Phono	 Zoom / Size		8 TV	 Shift + 8
	Standby TV	 Shift + Power		9 TV	 Shift + 9
	Volume Down	 Shift + Vol-		10/0 TV	 Shift + 0
	Volume Up TV	 Shift + Vol+		Memo/CH/PGM	 Shift + Fav / Marker / PC
	L TV	 Shift + Left		AMS/-/- TV	 Shift + Guide / EPG / -/-
	R TV	 Shift + Right		Standby CDV	 Power
	+ TV	 Shift + CH+ /		Volume Up CVD	 Vol+
	- TV	 Shift + CH- /		Volume Down	 Vol-
	Mute TV	 Shift + Mute / Dimmer		L CDV	 Left





	Original	Rechange	Original	Rechange
	R CDV	 Right		Pause / Step / Freeze
	+ CDV	 CH+ / Page+		Stop / Hold
	- CDV	 CH- / Page-		<< / Tune-
	Mute CDV	 Mute / Dimmer		>> / Tune+
	Mode CDV	 D.Menu / Top		
	1 CDV	 1		
	2 CDV	 2		
	3 CDV	 3		
	4 CDV	 4		
	5 CDV	 5		
	6 CDV	 6		
	7 CDV	 7		
	8 CDV	 8		
	9 CDV	 9		
	10/0 CDV	 0		
	Play CDV	 Play / Slow		
	Memo/CH/PGM	 Fav / Marker / PC		



CDV