 







 



 



 



 



 



 



 



 



 



 



 



 

 

 

 



 





 

 

 

 

 
 

 

 

 

 




 

 
 




Original	Rechange	Original	Rechange
 Power	 Power	 Vol-	 Vol-
 TV	 TV/Radio /	 PR+	 CH+ / Page+
 1	 1	 PR-	 CH- / Page-
 2	 2	 CH-List	 Display / Media
 3	 3	 Menu	 Menu / Home
 4	 4	 FAV-CH	 Fav / Marker / PC
 5	 5	 Tools	 Setup / OPT /
 6	 6	 Info	 Info / Angle
 7	 7	 Return	 Shift + Back / Return
 8	 8	 Exit	 Exit / Cancel / Clear
 9	 9	 Up	 Up
 0	 0	 Down	 Down
 Alarm	 Smart / List	 Left	 Left
 Pre-CH	 Back / Return	 Right	 Right
 Mute	 Mute / Dimmer	 Enter	 OK
 Source	 AV / Input / RDS	 Red	 Red / Netflix / Search
 Vol+	 Vol+	 Green	 Green / APP / Repeat





Original		Recharge		Original		Recharge	
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	TXT/MIX		Text / Goto				
	SRS		Picture / Format				
	P.Size		Zoom / Size				
	Dual/I/II		Audio / Lang I/II				
	Guide		Guide / EPG / -/--				
	SUBT.		Subtitle / EQ				
	<<		<< / Tune-				
	Pause		Pause / Step / Freeze				
	>>		>> / Tune+				
	Rec		Rec / Rec Mode				
	Play		Play / Slow				
	Stop		Stop / Hold				

