



| Original | | Rechange | | Original | | Rechange | |
|---|-----------------|---|-----------------------------|---|-------------|---|------------------|
|  | Index |  | Play / Slow |  | 6 |  | 6 |
|  | Red / -1 |  | Red / Netflix / Search |  | Contrast- |  | << / Tune- |
|  | Green / Timer / |  | Green / APP / Repeat |  | Contrast+ |  | >> / Tune+ |
|  | Yellow / Stop |  | Yellow / YouTube / Repeat |  | 7 |  | 7 |
|  | Blue / Reveal |  | Blue / Prime Video / Random |  | 8 |  | 8 |
|  | [≡]]] |  | Rec / Rec Mode |  | 9 |  | 9 |
|  | Cancel |  | Exit / Cancel / Clear |  | Brightness- |  | I<< / Preset- |
|  | Size |  | Zoom / Size |  | Brightness+ |  | >>I / Preset+ |
|  | TV |  | TV/Radio / |  | P/C |  | Back / Return |
|  | Text |  | Text / Goto |  | 0 |  | 0 |
|  | 1 |  | 1 |  | AV |  | AV / Input / RDS |
|  | 2 |  | 2 |  | ←•→ |  | Display / Media |
|  | 3 |  | 3 |  | ** |  | Smart / List |
|  | Tint- |  | Shift + Left |  | PIP |  | Picture / Format |
|  | Tint+ |  | Shift + Right |  | i |  | Info / Angle |
|  | 4 |  | 4 |  | i |  | Menu / Home |
|  | 5 |  | 5 |  | ---- |  | Subtitle / EQ |





| Original | Recharge | Original | Recharge |
|----------|-----------------------------|----------|------------------|
| -1 | Red / Netflix / Search | *+ | >> / Preset+ |
| +1 | Green / APP / Repeat | P/C | Back / Return |
| STOP | Yellow / YouTube / Repeat | 0 | 0 |
| E7 | Blue / Prime Video / Random | PIP | Picture / Format |
| E8 | Text / Goto | i | Info / Angle |
| 1 | 1 | P+ | CH+ / Page+ |
| 2 | 2 | Up | Up |
| 3 | 3 | Mute | Mute / Dimmer |
| 4 | 4 | Left | Left |
| 5 | 5 | Vol- | Vol- |
| 6 | 6 | OK | OK |
| -0 | << / Tune- | Right | Right |
| 0+ | >> / Tune+ | Vol+ | Vol+ |
| 7 | 7 | AUX | Shift + 7 |
| 8 | 8 | P- | CH- / Page- |
| 9 | 9 | Down | Down |
| -* | << / Preset- | Power | Power |

