







 



 



 




























 


























Original		Recharge		Original		Recharge	
	Standby/On		Power		Preset Up		>>  / Preset+
	1		1		Preset Down		<< / Preset-
	2		2		>> / Tune+		>> / Tune+
	3		3		<< / <<		<< / Tune-
	4		4		Stop		Stop / Hold
	5		5		Play/Pause CD		Play / Slow
	6		6		FM/AM		Fav / Marker / PC
	7		7		Play/Pause USB Memory		Pause / Step / Freeze
	8		8		AUX		AV / Input / RDS
	9		9		TA/News/Info		Info / Angle
	0		0		Display Mode		Setup / OPT /
	>10		Guide / EPG / -/--		PTY Search		Red / Netflix / Search
	Clock/Timer		Shift + Sleep / Timer		PTY+		CH+ / Page+
	Set/Resume		Menu / Home		PTY-		CH- / Page-
	Cancel		Exit / Cancel / Clear		QP Link		Smart / List
	Display		Display / Media		FM Mode		TV/Radio /
	MP3 Mode		Picture / Format		Repeat		Green / APP / Repeat



