












 















 






| Original | Recharge |
|---------------|-----------------------------|
| Power Audio | Power |
| Tv Direct | Shift + 0 |
| Power DVR/DVD | Red / Netflix / Search |
| Power VCR | Green / APP / Repeat |
| Power STB | Yellow / YouTube / Repeat |
| Power Tv | Blue / Prime Video / Random |
| DVR/DVD | Fav / Marker / PC |
| VCR | Shift + 4 |
| Video | Shift + 5 |
| TV | Shift + 1 |
| DVD Multi | Guide / EPG / -/-- |
| FM/AM | Shift + 6 |
| Tv/Video | TV/Radio / |
| Muting | Mute / Dimmer |
| Vol+ | Vol+ |
| Vol- | Vol- |
| Channel+ | Shift + Audio / Lang I/II |

| Original | Recharge |
|----------------------|-----------------------------|
| Channel- | Shift + Setup / OPT / Tools |
| Tv Vol+ | Shift + Vol+ |
| Tv Vol- | Shift + Vol- |
| I<</Tuning- | I<< / Preset- |
| Play/FM Mode | Play / Slow |
| >>I/Tuning+ | >>I / Preset+ |
| << | << / Tune- |
| Stop/Memory | Stop / Hold |
| Pause | Pause / Step / Freeze |
| >> | >> / Tune+ |
| Menu | Menu / Home |
| Top Menu/STB | D.Menu / Top |
| Smart Surround Setup | Sound / Title |
| On | Picture / Format |
| Up/TA/News/Inf | Up |
| Down/PTY | Down |
| Right/PTY+ | Right |





| Original | Rechange |
|--|---|
|  Left/PTY- |  Left |
|  Enter |  OK |
|  fsIRate/Audio |  Audio / Lang I/II |
|  Subtitle |  Subtitle / EQ |
|  SetUp |  Setup / OPT / |
|  DVD/HDD/Title/Gr |  Shift + 2 |
|  Zoom/→ |  Zoom / Size |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |

| Original | Rechange |
|---|--|
|  |  Back / Return |
|  VFP/Progressive |  Smart / List |
|  Angle |  Info / Angle |
|  Ex/Es/Return |  Shift + Back / Return |
|  Cancel |  Exit / Cancel / Clear |
|  DVD Card/Rec |  Rec / Rec Mode |
|  Rec Pause |  Shift + Pause / Step / |
|  Surround |  Eject / Surround |
|  Display/Dimmer |  Display / Media |
|  Input Analog/Digital |  AV / Input / RDS |
|  L-Front+/Thumbn |  Shift + Up |
|  L-Front- |  Shift + Down |
|  Front-R+/Slide |  Shift + Right |
|  Front-R- |  Shift + Left |
|  Center+/3D/S |  CH+ / Page+ |
|  Center- |  CH- / Page- |
|  Page+/Subwfr+ |  Shift + CH+ / Page+ |





| Original | Rechange |
|---------------|-------------------------------|
| Page-/Subwfr- | + Shift + CH- / |
| Test Tone | Text / Goto |
| Sleep | Sleep / Timer |
| L-Surr+ | + Shift + Smart / List |
| L-Surr- | + Shift + Display / Media |
| Surr-R+ | + Shift + TV/Radio / Program |
| Surr-R- | + Shift + AV / Input / RDS |
| S.Back+ | + Shift + Picture / Format |
| S.Back- | + Shift + D.Menu / Top Menu |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

| Original | Rechange |
|----------|----------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |











 





















 
 


| Original | Recharge |
|--------------|-----------------------|
| Power DVD | Power |
| Power Audio | Shift + Power |
| Muting | Mute / Dimmer |
| Vol+ | Vol+ |
| Vol- | Vol- |
| I<< | I<< / Preset- |
| Play | Play / Slow |
| >>I | >>I / Preset+ |
| << | << / Tune- |
| Stop | Stop / Hold |
| Pause | Pause / Step / Freeze |
| >> | >> / Tune+ |
| Menu | Menu / Home |
| Top Menu/STB | D.Menu / Top |
| On Screen | Picture / Format |
| Up | Up |
| Down | Down |

| Original | Recharge |
|------------------|-----------------------------|
| Right | Right |
| Left | Left |
| Enter | OK |
| fs/Rate/Audio | Audio / Lang I/II |
| Subtitle | Subtitle / EQ |
| Set Up | Setup / OPT / |
| DVD/HDD/Title/Gr | Blue / Prime Video / Random |
| Zoom/→ | Zoom / Size |
| ← | Back / Return |
| VFP/Progressive | Smart / List |
| Angle | Info / Angle |
| EX/Es/Return | Shift + Back / Return |
| Cancel | Exit / Cancel / Clear |
| DVD Card/Rec | Rec / Rec Mode |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |





| Original | | Rechange | | Original | | Rechange | |
|---|----------------------|---|---------------------------|----------|--|----------|--|
|  | 4 |  | 4 | | | | |
|  | 5 |  | 5 | | | | |
|  | 6 |  | 6 | | | | |
|  | 7 |  | 7 | | | | |
|  | 8 |  | 8 | | | | |
|  | 9 |  | 9 | | | | |
|  | 0 |  | 0 | | | | |
|  | 10 |  | Guide / EPG / -/-- | | | | |
|  | +10 |  | Fav / Marker / PC | | | | |
|  | Surround |  | Eject / Surround | | | | |
|  | Display/Dimmer |  | Display / Media | | | | |
|  | Input Analog/Digital |  | AV / Input / RDS | | | | |
|  | Thumbnail |  | Yellow / YouTube / Repeat | | | | |
|  | Slide |  | Text / Goto | | | | |
|  | 3D/S Effect |  | Sound / Title | | | | |
|  | Page+ |  | CH+ / Page+ | | | | |






 




| Original | Rechange |
|----------------------|------------------|
| Power Audio | Power |
| FM/AM | TV/Radio / |
| Muting | Mute / Dimmer |
| Vol+ | Vol+ |
| Vol- | Vol- |
| I<</Tuning- | I<< / Preset- |
| Play/FM Mode | Play / Slow |
| >>I/Tuning+ | >>I / Preset+ |
| Stop/Memory | Stop / Hold |
| Up/TA7News/Inf | Up |
| Down/PTY | Down |
| Right/PTY+ | Right |
| Left/PTY- | Left |
| On | Picture / Format |
| Smart Surround Setup | Smart / List |
| 1 FM/AM | 1 |
| 2 FM/AM | 2 |

| Original | Rechange |
|----------------|-------------------|
| 3 FM/AM | 3 |
| 4 FM/AM | 4 |
| 5 FM/AM | 5 |
| 6 FM/AM | 6 |
| 7 FM/AM | 7 |
| 8 FM/AM | 8 |
| 9 FM/AM | 9 |
| 10 FM/AM | 0 |
| +10 FM/AM | Fav / Marker / PC |
| EX/ES/Return | Back / Return |
| Display/Dimmer | Display / Media |
| Decode | Shift + 2 |
| EQ Freq | Shift + 3 |
| Bass Boost | Shift + 4 |
| C.Tone | Shift + 5 |
| EQ Level+ | Shift + 6 |
| Midnight | Shift + 7 |





| | Original | Rechange | | Original | Rechange |
|---|------------|---|-----------|----------|----------|
|  | Effect |  +  | Shift + 8 | | |
|  | EQ Level- |  +  | Shift + 9 | | |
|  | A.Position |  +  | Shift + 0 | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |

