











 







 


 
 


 
 



 

























 

 











Original		Rechange		Original		Rechange	
	Power		Power		8		8
	Mute		Mute / Dimmer		9		9
	[]/[+]		TV/Radio /		0		0
	Input		AV / Input / RDS		-/--		Guide / EPG / -/--
	[=]		Text / Goto		C		Fav / Marker / PC
	[X]/[o]		Zoom / Size		Red		Red / Netflix / Search
	[◆]		Picture / Format		Green		Green / APP / Repeat
	[?]/[i+]		Subtitle / EQ		Yellow		Yellow / YouTube / Repeat
	↔>		Smart / List		Blue		Blue / Prime Video / Random
	[]/[=i]		Display / Media		Menu		Menu / Home
	1		1		+		Up
	2		2		-		Down
	3		3		→←		OK
	4		4		Vol+		Vol+
	5		5		Vol-		Vol-
	6		6		Prog+		CH+ / Page+
	7		7		Prog-		CH- / Page-





Original	Recharge
 Power VTR1	 Shift + Power
 >> VTR1	 >> / Tune+
 Play VTR1	 Play / Slow
 << VTR1	 << / Tune-
 Stop VTR1	 Stop / Hold
 Pause VTR1	 Pause / Step / Freeze
 Rec VTR1	 Rec / Rec Mode
 Progr+ VTR1	 Shift + CH+ /
 Progr- VTR1	 Shift + CH- /

Original	Recharge





Original	Recharge	Original	Recharge
Power VTR2	Power		
Progr+ VTR2	CH+ / Page+		
Progr- VTR2	CH- / Page-		
Play VTR2	Play / Slow		
>> VTR2	>> / Tune+		
<< VTR2	<< / Tune-		
Stop VTR2	Stop / Hold		
Pause VTR2	Pause / Step / Freeze		
Rec VTR2	Rec / Rec Mode		

Original	Recharge















 





Original	Recharge	Original	Recharge
Power VTR3	Power		
Play VTR3	Play / Slow		
>> VTR3	>> / Tune+		
<< VTR3	<< / Tune-		
Stop VTR3	Stop / Hold		
Pause VTR3	Pause / Step / Freeze		
Prog+ VTR3	CH+ / Page+		
Progr- VTR3	CH- / Page-		
Rec VTR3	Rec / Rec Mode		





Original	Rechange	Original	Rechange
 Power MDP	 Power		
 Play MDP	 Play / Slow		
 >> MDP	 >> / Tune+		
 << MDP	 << / Tune-		
 Stop MDP	 Stop / Hold		
 Pause MDP	 Pause / Step / Freeze		
 Progr+ MDP	 CH+ / Page+		
 Progr- MDP	 CH- / Page-		

