































 











Original	Recharge	Original	Recharge
Bright- Sys	 << / Tune-	Green	 Green / APP / Repeat
Bright+ Mode	 >> / Tune+	Yellow	 Yellow / YouTube / Repeat
Update	 Smart / List	Blue	 Blue / Prime Video / Random
0/10	 0	Color+ P.Std	 Picture / Format
1	 1	Color- S.Std	 Sound / Title
2	 2	Menu Up	 Up
3	 3	Mute	 Mute / Dimmer
4	 4	Subt.List	 Subtitle / EQ
5	 5	Sleep Timer	 Sleep / Timer
6	 6	Return TV	 TV/Radio /
7	 7	Menu video	 D.Menu / Top
8	 8	Text	 Text / Goto
9	 9	Txt Expand	 Zoom / Size
Guide -/-- 1.	 Guide / EPG / -/--	TV/AV	 AV / Input / RDS
Chan.Down	 CH- / Page-	Menu	 Menu / Home
2.Fav P/C 2.	 Fav / Marker / PC	On/Off	 Power
Red	 Red / Netflix / Search	Display	 Display / Media



Original	Recharge	Original	Recharge
Menu Left		Left	
OK Enter		OK	
Menu Right		Right	
Menu Down		Down	
Back		Back / Return	
Volume+		Vol+	
Chan.Up		CH+ / Page+	
Volume-		Vol-	

