



 
 

 








 
 
 





 




 
 
 


 
 
 
 
 


 

 
 
 



 















 

Original	Recharge
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Shift + Guide / EPG / -/--
 0	 0
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 FAV	 Fav / Marker / PC

Original	Recharge
 Vol+	 Vol+
 MTS I/II	 Audio / Lang I/II
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Sub-T	 Subtitle / EQ
 CH-	 CH- / Page-
 SET	 Smart / List
 Home	 D.Menu / Top
 Mouse	 Info / Angle
 Source	 AV / Input / RDS
 Up	 Up
 Display	 Display / Media
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down





Original		Rechange	
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	<< / Text/CC		<< / Tune-
	<< / Text/CC		Text / Goto
	Play/Pause /		Play / Slow
	Play/Pause /		Pause / Step / Freeze
	>> / Reveal		>> / Tune+
	I<< / Hold		I<< / Preset-
	I<< / Hold		Shift + Stop /
	>>I / Size		>>I / Preset+
	>>I / Size		Zoom / Size
	Stop / Index		Stop / Hold
	Aspect		Shift + Picture / Format
	Freeze		Shift + Pause / Step / Freeze

Original		Rechange	
	Sleep		Sleep / Timer
	T.Shift		TV/Radio /
	Rec		Rec / Rec Mode
	EPG		Guide / EPG / -/-

