




















 






 
















 












 

 



 





Original	Recharge
 Power	 Power
 Sky	 D.Menu / Top
 box office	 Display / Media
 services	 Menu / Home
 tv guide	 Guide / EPG / -/--
 Interactive	 Smart / List
 i	 Info / Angle
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Select	 OK
 text	 Text / Goto
 back up	 Back / Return
 help	 Exit / Cancel / Clear

Original	Recharge
 <<	 << / Tune-
 pause	 Pause / Step / Freeze
 play	 Play / Slow
 >>	 >> / Tune+
 R	 Rec / Rec Mode
 Stop	 Stop / Hold
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7




**Original**
**Recharge**

8 tuv	8	USB <b>8</b>	8
9 wxyz	9	BLUETOOTH <b>9</b>	9
0 1	0	HDMI - BAT <b>0</b>	0

**Original**
**Recharge**