

 

 

 

 

 

 

 





 

 





 





 

















 





 

 











Original	Rechange
 Power	 Power
 Source	 AV / Input / RDS
 Caption	 Subtitle / EQ
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -	 Eject / Surround
 0	 0
 PRE-CH	 Fav / Marker / PC
 Auto Prog.	 TV/Radio /
 FAV.CH	 Shift + Fav / Marker / PC

Original	Rechange
 ADD/Del	 D.Menu / Top
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+
 Vol-	 Vol-
 CH List	 Smart / List
 CH-	 CH- / Page-
 Menu	 Menu / Home
 MTS	 Display / Media
 Guide	 Guide / EPG / -/--
 Tools	 Setup / OPT /
 Up	 Up
 Info	 Info / Angle
 Left	 Left
 Enter	 OK
 Right	 Right
 Return	 Back / Return





Original	Recharge	Original	Recharge
Down	Down	Play	Play / Slow
Exit	Exit / Cancel / Clear	>>	>> / Tune+
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		
PIP	Text / Goto		
PIP CH-	I<< / Preset-		
PIP CH+	>>I / Preset+		
P.Mode	Picture / Format		
S.Mode	Sound / Title		
P.Size	Zoom / Size		
Still	Shift + Pause / Step / Step /		
Rec	Rec / Rec Mode		
Stop	Stop / Hold		
<<	<< / Tune-		
Pause	Pause / Step / Freeze		

