
 


 






















 



 

 
 


Original	Rechange
 Power	 Shift + Power
 AMP Power	 Power
 Tuner Preset ▼	 CH- / Page-
 Tuner Preset ▲	 CH+ / Page+
 Tuner	 Shift + 6
 CD	 Shift + 3
 Recorder	 Rec / Rec Mode
 Network	 Shift + 4
 Phono	 Shift + 5
 Coaxial	 D.Menu / Top
 Optical	 Shift + 7
 I<<	 I<< / Preset-
 Sound Mode	 Sound / Title
 >>I	 >>I / Preset+
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze

Original	Rechange
 Input	 AV / Input / RDS
 Info	 Info / Angle
 Source Direct	 Smart / List
 Mute	 Mute / Dimmer
 Volume+	 Vol+
 Volume-	 Vol-
 Time/Home	 Display / Media
 Mode	 Picture / Format
 Prog/Favorite	 Fav / Marker / PC
 Menu	 Menu / Home
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 Enter	 OK
 1	 1
 2	 2










 




	Original	Rechange
	3	 3
	4	 4
	5	 5
	6	 6
	7	 7
	8	 8
	9	 9
	0	 0
	+10	 Guide / EPG / -/--
	Clear	 Exit / Cancel / Clear
	Dimmer	 Shift + Mute / Dimmer
	Random	 Blue / Prime Video / Random
	Repeat	 Green / APP / Repeat
	Repeat	 Zoom / Size

	Original	Rechange





Original	Recharge
 Power	 Shift + Power
 AMP Power	 Power
 Tuner	 Shift + 6
 Tuner Preset ▼	 CH- / Page-
 Tuner Preset ▲	 CH+ / Page+
 CD	 Shift + 3
 Recorder	 Shift + 8
 Network	 Shift + 4
 Phono	 Shift + 5
 Coaxial	 Shift + 9
 Optical	 Shift + 7
 I<<	 I<< / Preset-
 Sound Mode	 Sound / Title
 >>I	 >>I / Preset+
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze

Original	Recharge
 Input	 Display / Media
 Source Direct	 AV / Input / RDS
 Volume+	 Vol+
 Info	 Info / Angle
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Time/Home	 Sleep / Timer
 Mode	 Picture / Format
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Prog/Favorite	 Fav / Marker / PC
 Down	 Down
 Menu	 Menu / Home
 1	 1
 2	 2





Original		Rechange		Original		Rechange	
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	+10		Guide / EPG / -/--				
	0		0				
	Clear		Exit / Cancel / Clear				
	Dimmer	+	Shift + Mute / Dimmer				
	Random		Blue / Prime Video / Random				
	Repeat		Green / APP / Repeat				
	Repeat		Yellow / YouTube / Repeat				

