


 

























 











 














 





 













 


Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Shift + Guide / EPG / -/--
 0	 0
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 FAV	 Fav / Marker / PC

Original	Rechange
 Vol+	 Vol+
 MTS /II	 Audio / Lang I/II
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Sub-T	 Subtitle / EQ
 CH-	 CH- / Page-
 Aspect	 Zoom / Size
 Freeze	 Shift + Pause / Step /
 Sleep	 Sleep / Timer
 Source	 AV / Input / RDS
 Up	 Up
 Display	 Display / Media
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down





Original	Recharge	Original	Recharge
 Exit	 Exit / Cancel / Clear	 Rec	 Rec / Rec Mode
 Red	 Red / Netflix / Search	 EPG	 Guide / EPG / -/-
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 << / Text/CC	 << / Tune-		
 << / Text/CC	 Text / Goto		
 Play/Pause /	 Pause / Step / Freeze		
 Play/Pause /	 Play / Slow		
 >> / Reveal	 >> / Tune+		
 << / Hold	 << / Preset-		
 >> / Size	 >> / Preset+		
 Stop / Index	 Stop / Hold		
 Root	 Setup / OPT /		
 Repeat	 Shift + Green / APP /		
 List	 Smart / List		
 T.Shift	 D.Menu / Top		

