

 



















 



 




 












 




 
 
















 





Original	Rechange	Original	Rechange
 Power	 Power	 Up / P+	 CH+ / Page+
 1	 1	 Left / Vol-	 Left
 2	 2	 Left / Vol-	 Vol-
 3	 3	 Right / Vol+	 Right
 4	 4	 Right / Vol+	 Vol+
 5	 5	 Down / P-	 Down
 6	 6	 Down / P-	 CH- / Page-
 7	 7	 Red	 Red / Netflix / Search
 8	 8	 Green	 Green / APP / Repeat
 9	 9	 Yellow / FT-	 Yellow / YouTube / Repeat
 0 / AV	 0	 Blue / FT+	 Blue / Prime Video / Random
 0 / AV	 AV / Input / RDS	 Text Memo	 Smart / List
 P↔P	 Back / Return	 Info	 Info / Angle
 Timer	 Sleep / Timer	 Mute	 Mute / Dimmer
 Menu	 Menu / Home	 Text Cancel	 Display / Media
 Enter	 OK	 Text	 Text / Goto
 Up / P+	 Up	 Skip	 Sound / Title

Original	Rechange	Original	Rechange
 Power	 DIMMER MUTE	 SHIFT	
 TV	 DVD	 SAT	 AUX
 SLOW	 STEP-FREEZE	 HOLD	 REC MODE
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 TITLE	 LANG VUI	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 PICTURE	 ZOOM	 SLEEP	 TV RADIO
 TOP MENU	 OPT-TOOLS	 GOTO	 RDS
 D.MENU	 SETUP	 TEXT	 AV INPUT
 HOME	 ANGLE	 MENU	 INFO
 OK	 CLEAR	 EXIT	 RETURN
 VOL+	 CANCEL	 LIST	 BACK
 VOL-	 SMART	 MEDIA	 CH PAGE
 TV	 DISPLAY	 TV	 CH PAGE
 1	 DVD	 CD - STB	
 2	 TAPE	 TUNER	
 3	 AUX - HDD	 USB	 BLUETOOTH
 4	 HDMI - SAT	 FC	
 5	 GUIDE EPG	 0	 FAV MARKER
6	NETFLIX	APP	YouTube
7	REPEAT	REPEAT A-B	RANDOM
8	SEARCH		
9			



