 

 

 

 

 

 

 



 

 

 

 

 

 

 

 

 





Original	Rechange
 Power	 Power
 TV	 Zoom / Size
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide / EPG / -/--
 Pre-CH	 Fav / Marker / PC
 Vol +	 Vol+
 Vol -	 Vol-
 Mute	 Mute / Dimmer

Original	Rechange
 Source	 AV / Input / RDS
 P +	 CH+ / Page+
 P -	 CH- / Page-
 CH.List	 Sound / Title
 Menu	 Menu / Home
 W.Link	 Smart / List
 Tools	 Eject / Surround
 Return	 Back / Return
 Info	 Info / Angle
 Exit	 Exit / Cancel / Clear
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 OK
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat





Original		Rechange	
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	TTX / Mix		Setup / OPT /
	P.Size		Sleep / Timer
	SRS		D.Menu / Top
	E.Mode		Audio / Lang I/II
	P.Mode		Picture / Format
	HDMI		Display / Media
	<<		>> / Tune+
	Pause		Pause / Step / Freeze
	>>		I<< / Preset-
	Rec		Rec / Rec Mode
	Play		Play / Slow
	Stop		Stop / Hold

Original	Rechange

