



| Original | Recharge |
|----------|-----------------|
| Power | Power |
| Mute | Mute / Dimmer |
| Display | Display / Media |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| 0 | 0 |
| Up | Up |
| Up | CH+ / Page+ |
| Down | Down |
| Down | CH- / Page- |

| Original | Recharge |
|-----------------|-----------------------------|
| Vol+ / Right | Right |
| Vol+ / Right | Vol+ |
| Vol- / Left | Left |
| Vol- / Left | Vol- |
| Menu | Menu / Home |
| ◊ | Smart / List |
| AV | AV / Input / RDS |
| TV | TV/Radio / |
| Text | Text / Goto |
| Red / F | Red / Netflix / Search |
| Green / →← | Green / APP / Repeat |
| Yellow / Recall | Yellow / YouTube / Repeat |
| Yellow / Recall | Back / Return |
| Blue / Timer | Blue / Prime Video / Random |
| Blue / Timer | Sleep / Timer |

